
ODC01

# **Outdoor Climber**

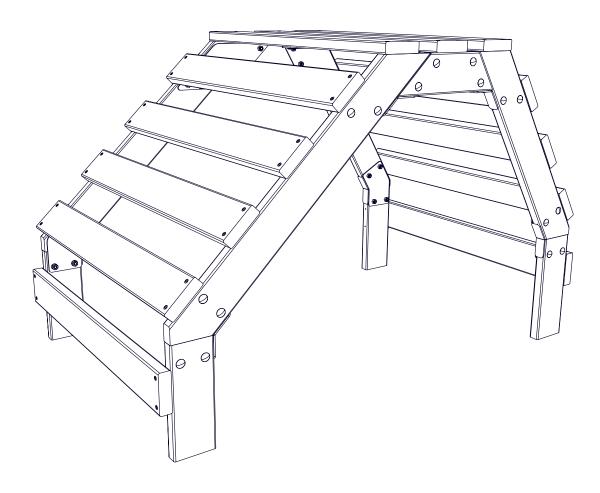

## **Assembly Guide**

Check out our other products online at www.copernicused.com
For assistance, please contact us by telephone at 1-800-267-8494 or email at info@copernicused.com.
Have your packing slip ready for reference.



# **Customer Service & Warranty Information**

Dear Educator,

Every day we see and hear stories of teachers going above and beyond to help students thrive. Thank you so much for all you do – you are awesome, and you make a difference. Thank you for inspiring us.

If you have any questions, concerns or ideas on how we can improve please let us know by contacting our Customer Solutions Ninjas at 1-800-267-8494 or info@copernicused.com.

Happy teaching,

Kaylyn Belcourt, President kaylyn@copernicused.com



For missing parts and other issues regarding your product: Please contact Customer Service, where we will be happy to help. Telephone: 1-800-267-8494, Monday - Friday 8:00am - 4:30 pm EST Email: info@copernicused.com

Need Support? Have a Question?



other great products!

Check out some of our





Make a Warranty Claim

We offer a Lifetime Warranty on almost everything we make. Please call 1-800-267-8494 or email info@copernicused.com to start your warranty claim. Proof of purchase will be required upon warranty claim (i.e. copy of invoice).

### **Tips for Assembly**

#### Before You Begin:

- Lay out and identify all of the included parts.
- The hardware has been packed according to step.
- Read the assembly guide over once to familiarize yourself with them.

#### As You Assemble the Unit:

- Follow the steps in sequence.
- Before beginning each step, find the part(s) that you need for that step.
- The title of each step states what you will be doing. Review the text and the pictures as you build the unit.

#### Watch for These Helpful Symbols:



2-Person Task

For safety, please have someone help you when working on steps displaying this symbol.



The symbol denotes a step needing extra attention to ensure it is done correctly.



## Important Information! Warning!

Please read the warnings below for important safety information regarding your product. Failure to read these warnings or to follow the instructions below could result in personal injury or damage to your product that could void your warranty.



**Small Parts** 

In its unassembled state, this product contains parts that can be hazardous to small children. This product should be assembled by an adult.



Adult Supervision

This product is to be used under the supervision of an adult.




No Maintenance This product does NOT require maintenance. Repairs should only be performed by authorized personnel. Please contact customer service if repairs are required.

### **Parts**

### Before beginning, you should have:

**Under Tread Plate** 

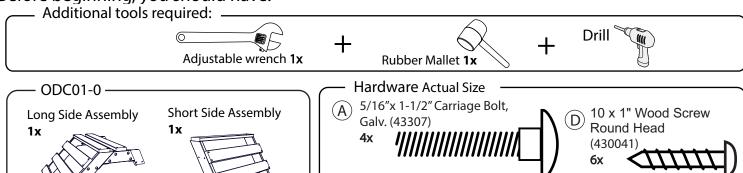



4x

(B)

5/16 Split Lock Washer,

Galv. (430250)

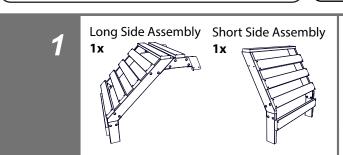

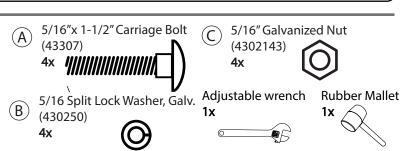



C 5/16" Galvanized Nut

(4302143)


### **Align the two Side Assemblies**


Lay the Long Side Assembly and Short Side Assembly on their side for easier assembly.

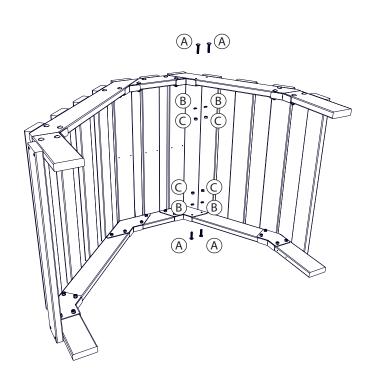

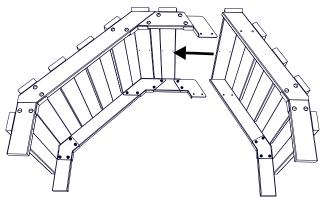


Hammer the bolts into the pre-drilled holes until they cannot turn.

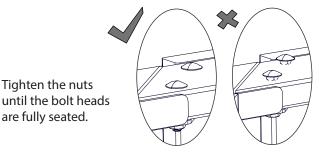


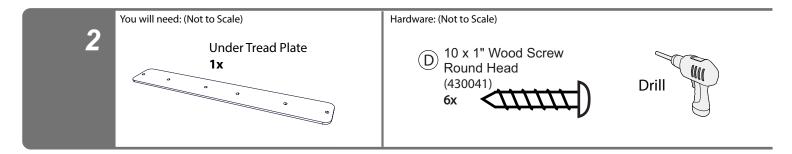



#### **Attach the Under Tread Plate**

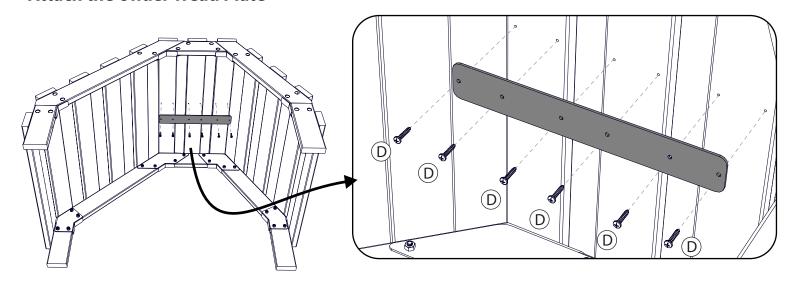

## Turn the Climber right side up

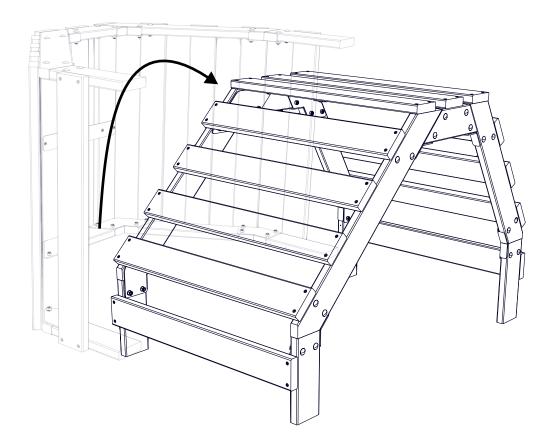

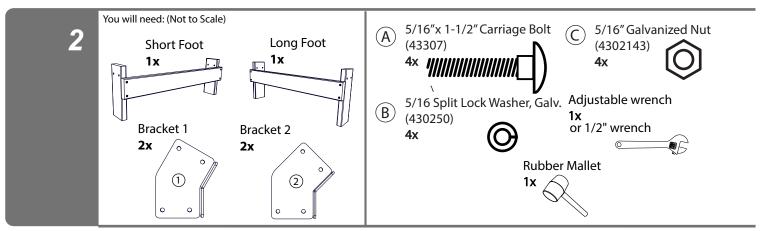

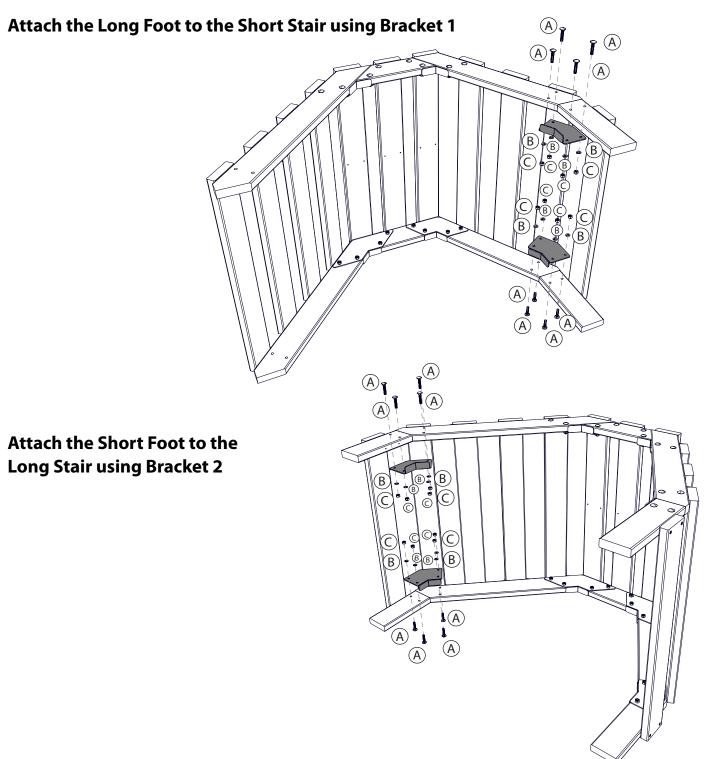

## **Parts**

#### Before beginning, you should have:

