

SAN400
SAN401

All-in-one Sanitizer Cart



Assembly Guide SAN400, 401_2020_A

Check out our other products online at
www.copernicused.com

For assistance, please contact us:

1-800-267-8494

Email info@copernicused.com

Have your packing slip ready for reference

WARNING



- This product is meant to be assembled by an adult.
- In its unassembled state, small parts present a hazard.
- To be used under direct supervision of an adult.



SAN401
All-in-one Sanitizer Cart - Base



SAN400
All-in-one Sanitizer Cart - Premium



Please Recycle

All-in-one Sanitizer Cart



Assembly Guide SAN400, 401_2020_A

Check out our other products online at
www.copernicused.com

For assistance, please contact us:

1-800-267-8494

Email info@copernicused.com

Have your packing slip ready for reference

Dear Educator,

Thank you for purchasing the All-in-one Sanitizer Cart. We hope it meets all your expectations and you and your students enjoy using it in your school. If you have any questions, concerns or ideas on how we can improve please let us know by contacting our Customer Solutions Ninjas at 1-800-267-8494 or info@copernicused.com. Happy teaching,

Kaylyn Belcourt
President

Lifetime All Components Warranty

Register your Product

Registering your warranty ensures we have all the information we need to make any future warranty claims quick and easy. Please visit www.copernicused.com/warranty and complete the form within 10 business days from product assembly. By registering your product, you will be entered into a draw to win Copernicus product.

Make a Warranty Claim

We offer a Lifetime Warranty on almost everything we make. Please call 1-800-267-8494 or email info@copernicused.com to start your warranty claim. Proof of purchase will be required upon warranty claim (i.e. copy of invoice).



Warning! Hazard Risks!

Please read the warnings below for important safety information regarding your product. Failure to read these warnings or to follow the instructions below could result in personal injury or damage to your product that could void your warranty.



Adult
Supervision

This product is to be used under the supervision of an adult.



Small
Parts

In its unassembled state, this product contains parts that can be hazardous to small children. This product should be assembled by an adult.

Customer Service - FAQ's



For any issues:

Please call Copernicus Customer Service, where we will be happy to help.

1-800-267-8494. Monday - Friday 8:00am - 4:30 pm EST.

Email our Customer Support Service at vanessa@copernicused.com

Check out some of our
other great products!



www.copernicused.com

Before beginning, you should have:

Additional tools required:



OR


7/16" (11mm)
1x



Rubber Mallet 1x




Screwdriver



SAN401-AC


Sign
(32290)
1x

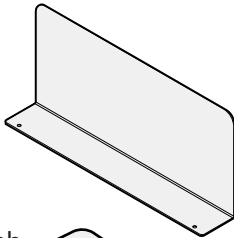


Sign Tab
(32293)
2x




Paper Towel Rack
(32280)
1x

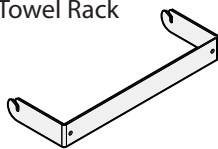


Paper Towel Wire
(31135)
1x

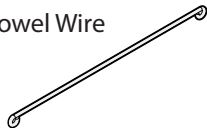

Small Tub
2x
(CC4070-B)

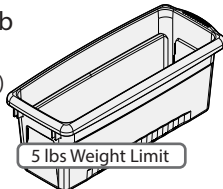

Large Tub
2x
(CC4068-B)

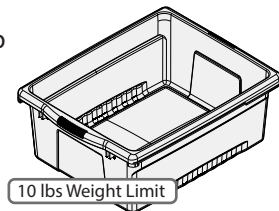

Hardware Actual Size

(A) 1/4-20 x 1/2" Pan Head Screw
(4300382)
2x




(B) 1/4-20 Lock Nut
(430101)
2x



SAN400-AC


Sign
(32290)
1x

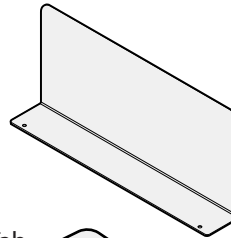


Sign Tab
(32293)
2x




Paper Towel Rack
(32280)
1x

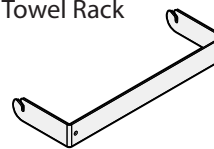


Paper Towel Wire
(31135)
1x

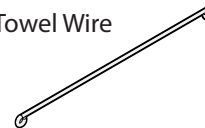

Small Tub
2x
(CC4070-B)

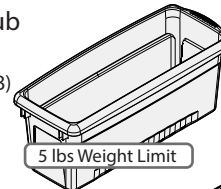

Tech Tub
1x
(TEC57)

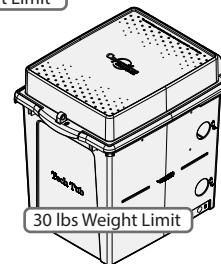

Hardware Actual Size

(A) 1/4-20 x 1/2" Pan Head Screw
(4300382)
2x




(B) 1/4-20 Lock Nut
(430101)
2x





CC1 CART

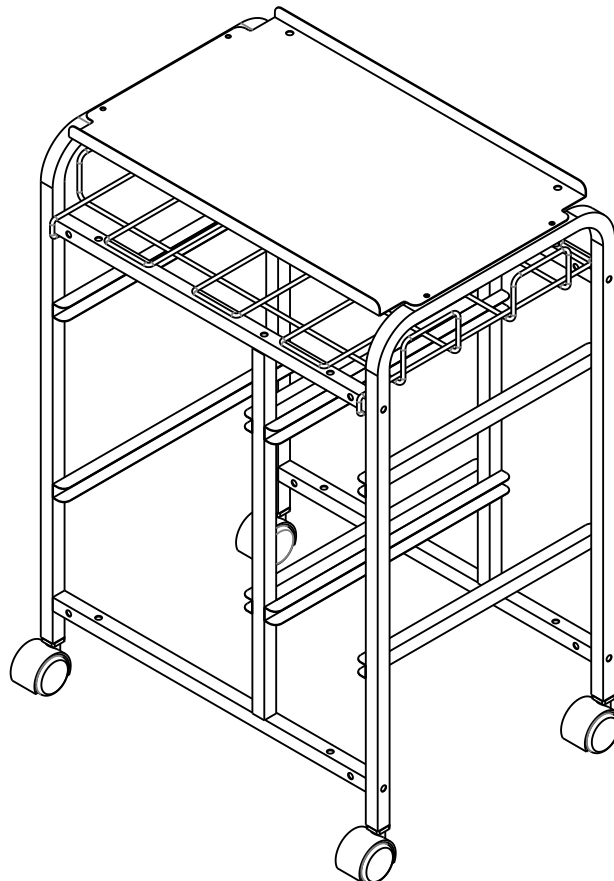

1

Actual Size:


(A) 2x

(B) 2x




You will need: (Not to Scale)

Sign
1x

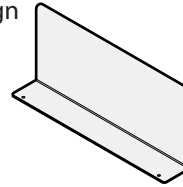


Sign Tab
2x

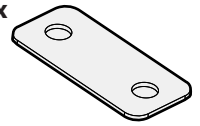

Fasten Tabs to Sign

NOTE:
DO NOT FULLY TIGHTEN
HARDWARE YET

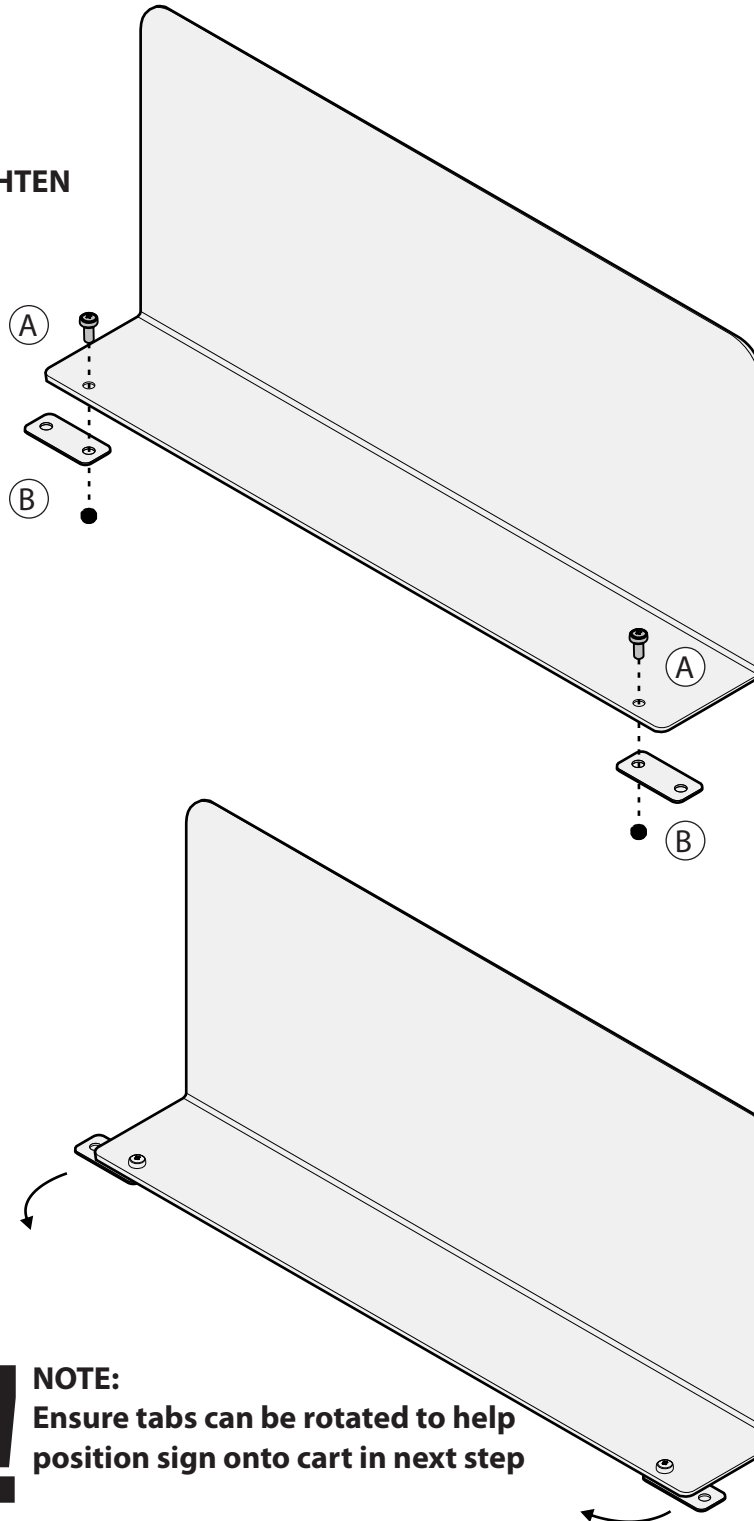


NOTE:
Ensure tabs can be rotated to help
position sign onto cart in next step

Fasten Sign to Cart

1 Unfasten hardware as shown

NOTE


Do not discard hardware as you will need it to fasten the sign onto the cart

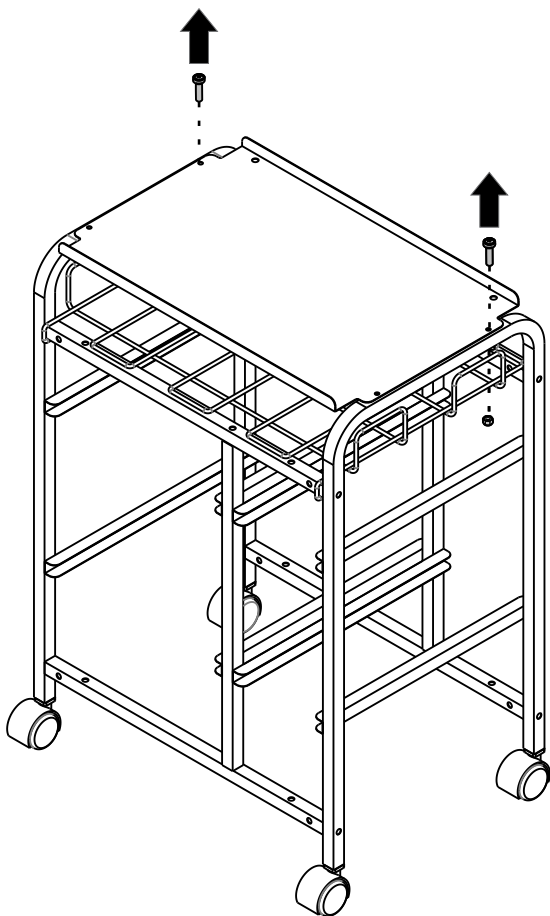

2 Move sign into position and fasten using hardware you just removed

NOTE



Rotate one or both tabs to help get sign into position

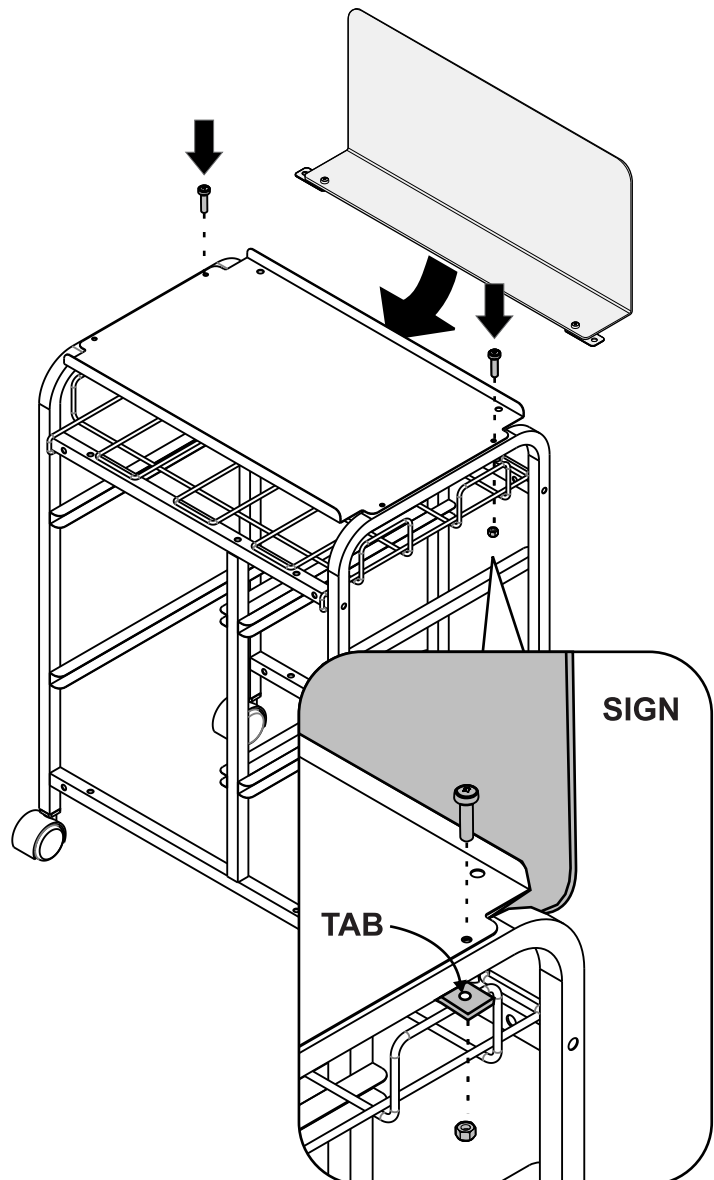




TIGHTEN ALL HARDWARE

3

You will need: (Not to Scale)

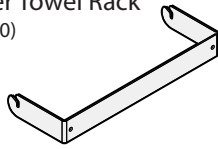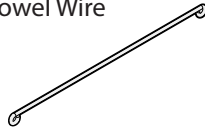
Paper Towel Rack
(32280)**1x**Paper Towel Wire
(31135)**1x**

Fasten Paper Towel Holder to Cart

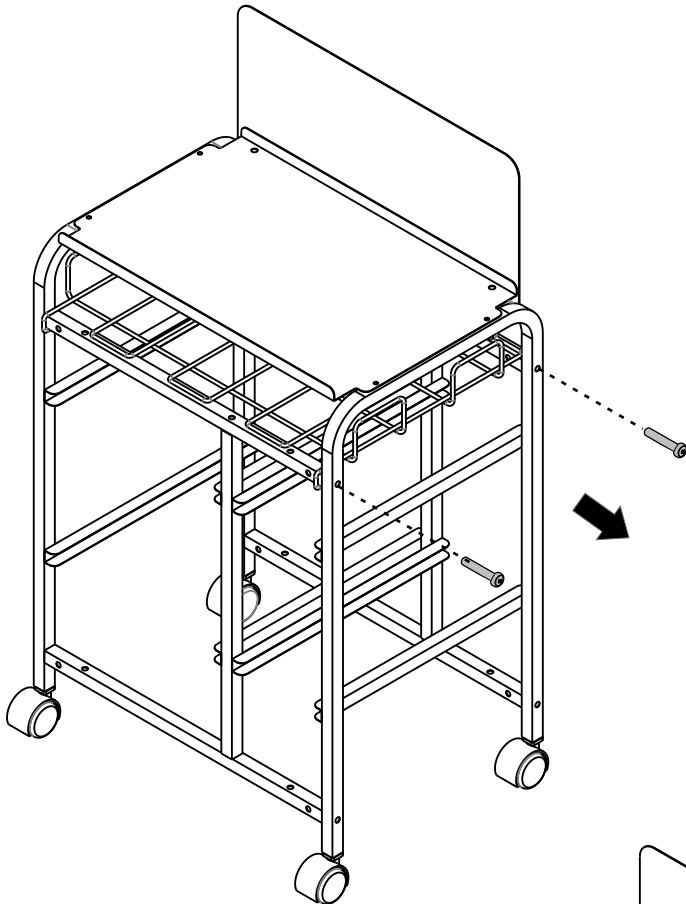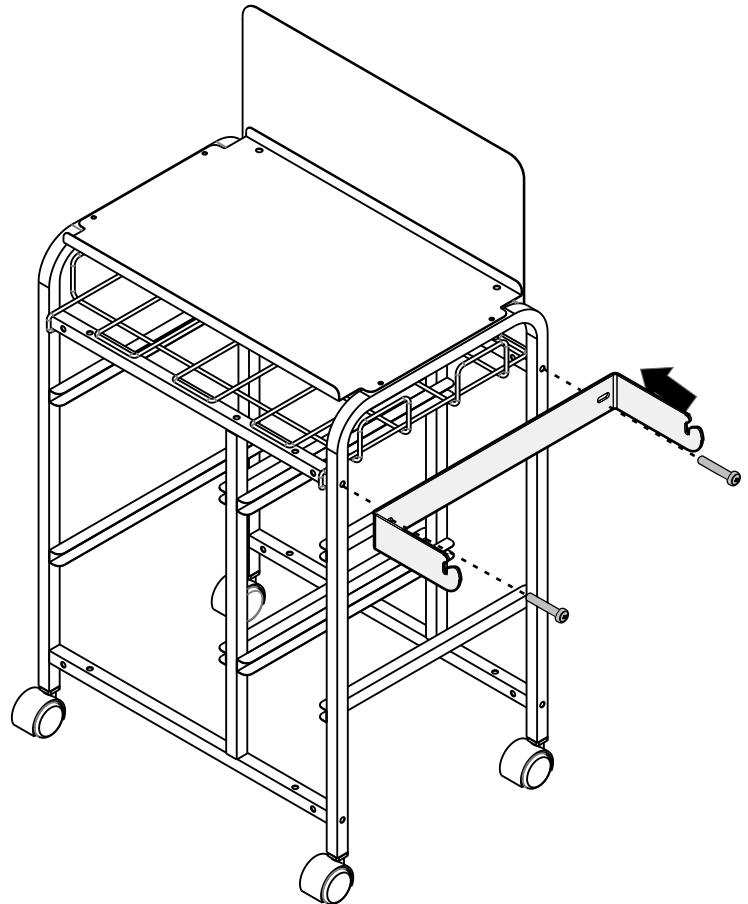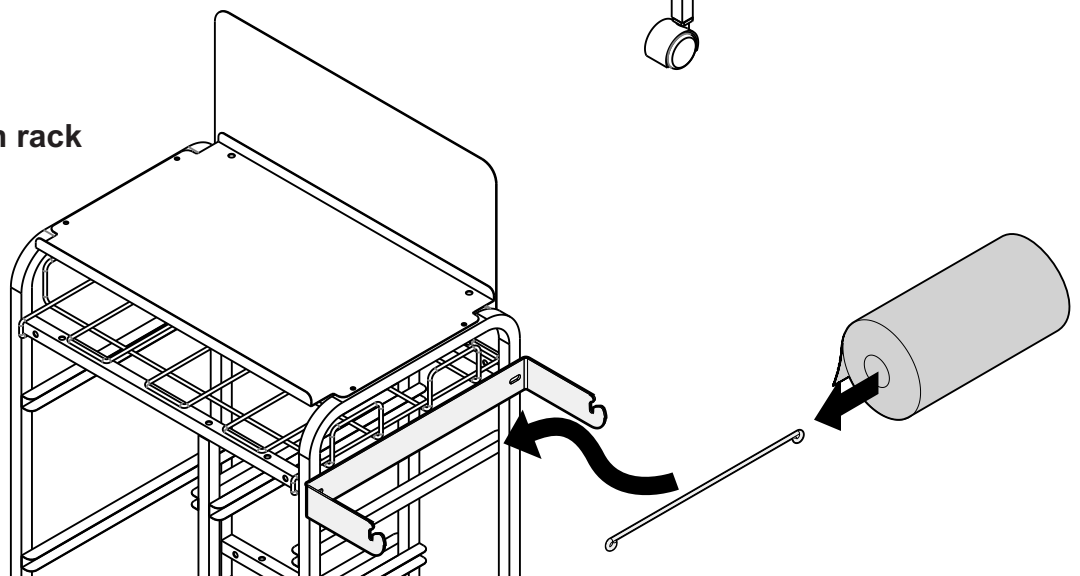
1 Unfasten hardware as shown**2** Fasten Paper Towel Rack using hardware you just removed**3** Install paper towel on rack

4A
SAN401
ONLY


Small Tub
2x

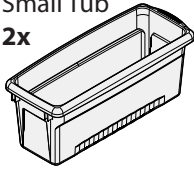

Large Tub
2x

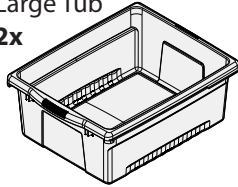


Install Tubs

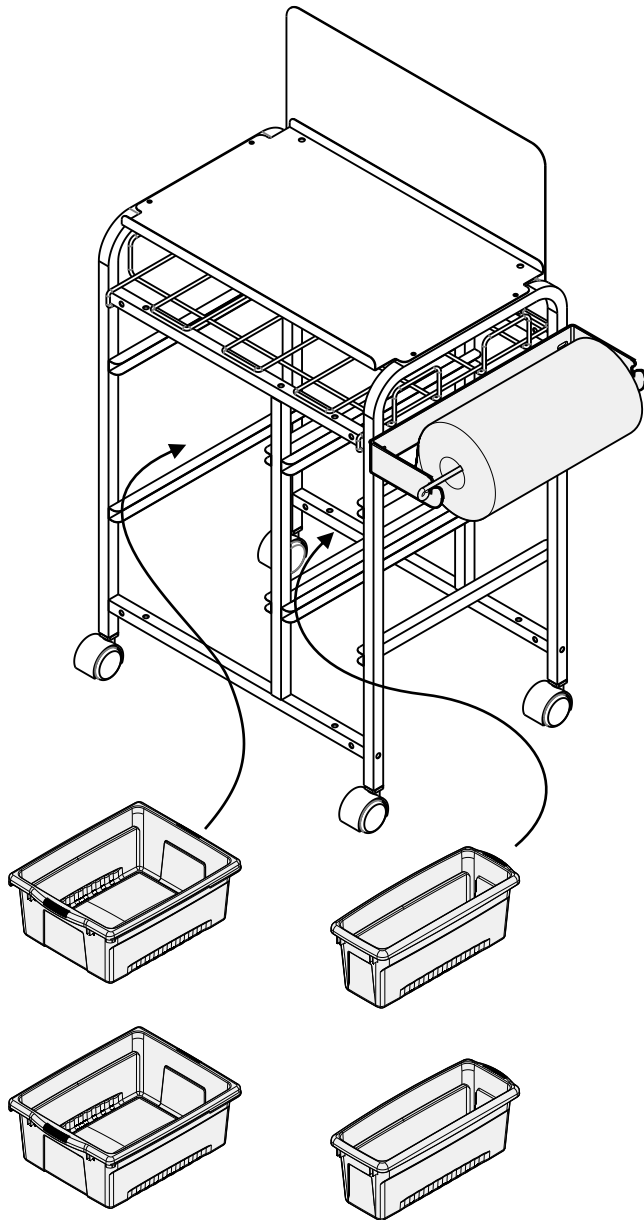


4B
SAN400
ONLY

Small Tub
2x

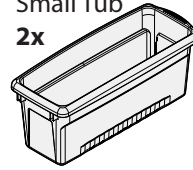

Tech Tub
1x

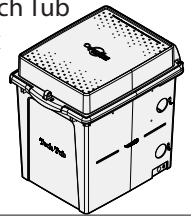

Install Tubs

