

CS700-SAN

Deluxe Chart Stand Sanitizer Station



Assembly Guide CS700-SAN_2020_C

Check out our other products online at
www.copernicused.com

For assistance, please contact us:

1-800-267-8494

Email info@copernicused.com

Have your packing slip ready for reference

WARNING




- This product is meant to be assembled by an adult.
- In its unassembled state, small parts present a hazard.
- To be used under direct supervision of an adult.

CS700-SAN




The CS700-SAN includes the following boxes


CS700-0

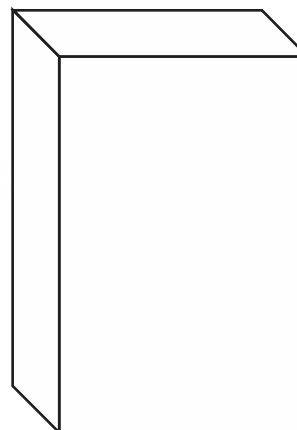

CS700-CB

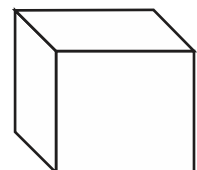

CS700-AC

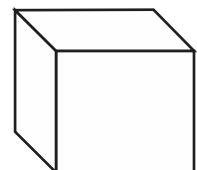

Please Recycle



Assembly Guide

CS700-SAN_2020_C

Check out our other products online at
www.copernicused.com

For assistance, please contact us:

1-800-267-8494

Email info@copernicused.com

Have your packing slip ready for reference

Dear Educator,

Thank you for purchasing the Deluxe Chart Stand Sanitizer Station. We hope it meets all your expectations and you and your students enjoy using it in your school.

If you have any questions, concerns or ideas on how we can improve please let us know by contacting our Customer Solutions Ninjas at 1-800-267-8494 or info@copernicused.com.

Happy teaching,

Kaylyn Belcourt
 President

We do not inherit the earth from our ancestors, we borrow it from our children.

Change is the end result of all true learning.

LEO BUSCAGLIA

What you leave behind is not what is engraved in stone monuments, but what is woven into the lives of others.

Education is the most powerful weapon which you can use to change the world.

NELSON MANDELA

NORTH AMERICAN

PROVERB

PERICLES

Lifetime

Frame & Tub
 Warranty

Register your Product

Registering your warranty ensures we have all the information we need to make any future warranty claims quick and easy. Please visit www.copernicused.com/warranty and complete the form within 10 business days from product assembly. By registering your product, you will be entered into a draw to win Copernicus product.

5

Year

Whiteboard
 Warranty

Make a Warranty Claim

We offer a Lifetime Warranty on almost everything we make. Please call 1-800-267-8494 or email info@copernicused.com to start your warranty claim. Proof of purchase will be required upon warranty claim (i.e. copy of invoice).

1

Year

Dispenser
 Warranty

Replace your Whiteboard

Have a well-used whiteboard that needs replacing? Our whiteboards carry a five-year warranty and replacement parts program after the warranty period. Please call 1-800-267-8494 or email info@copernicused.com to get a new whiteboard for your Copernicus product!



Warning! Hazard Risks!

Please read the warnings below for important safety information regarding your product. Failure to read these warnings or to follow the instructions below could result in personal injury or damage to your product that could void your warranty.



Small
Parts

In its unassembled state, this product contains parts that can be hazardous to small children. This product should be assembled by an adult.



Adult
Supervision

This product is to be used under the supervision of an adult.




Indoor Use
Only

This product is intended for indoor use only. To reduce the risk of fire or electric shock, do not expose this product to rain or moisture. The internal components are not sealed from the environment.



Power Strip
Specifications

Read your power strip electrical specifications. Only plug in devices that are approved for use with this power strip. Connect the supplied power strip directly to a wall outlet. **Do not connect to another power strip or use an extension cord.** Unplug when not in use. **Do not leave this product plugged in for more than 72 consecutive hours.** Turn off power strip before unplugging.

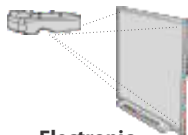

Electronic
Equipment

Read the electrical specifications of any electronic equipment you are using with your Copernicus products. Failure to read these specifications and follow their instructions could result in damage to your equipment or personal injury.



Cable Trip
Hazard

Ensure that any cables extending across the floor to your product are properly bundled and marked to avoid tripping or falling which may lead to personal injury.



Electrical Shock

Do not install or use the electrical components of this unit during a lightning storm.



Climb Hazard

Do not climb on, hang from or suspend objects from any components of your product unless otherwise specified.

Tips for Assembly

Watch for These Helpful Symbols

This symbol denotes a 2-Person Task. For safety, please ensure that there are the suggested number of people working on steps displaying this symbol.



Watch for this symbol throughout the Assembly Guide. Wherever you see it, pay close attention. The symbol denotes a step needing extra attention to ensure it is done correctly.



The star symbol highlights an advisory note.



Before You Begin

- Lay out and identify all of the included parts.
- The hardware has been packed according to step.
- Read the assembly guide over once to familiarize yourself with them.



 Please note that in its unassembled state, this product contains parts that can be hazardous to small children. This product should be assembled by an adult.

 Please note, star washers are critical components for electrical safety. Star washers must be included and fasteners fully tightened to prevent the risk of electric shock..



As You Assemble the Unit

- Follow the steps in sequence.
- Before beginning each step, find the part(s) that you need for that step.
- Pay attention to the labels on the parts; they are there to help direct you at certain stages.
- The title of each step states what you will be doing. Review the text and the pictures as you build the unit.

Customer Service - FAQ's



For missing parts and other issues regarding the frame:

Please call Copernicus Customer Service, where we will be happy to help.

1-800-267-8494. Monday - Friday 8:00am - 4:30 pm EST.

OR

Email Customer Service at info@copernicused.com

**Need Tech Support?
Have a Question?**



Email our Tech Support Service


**Check out some of our
other great products!**



www.copernicused.com

Before beginning, you should have:

Additional tools required:

Adjustable wrench
1x 

OR

8mm (5/16")
1x

+


10mm (3/8")
1x

+


⊕ Screwdriver
1x

CS700-AC

Dispenser Mounting
Bracket
2x

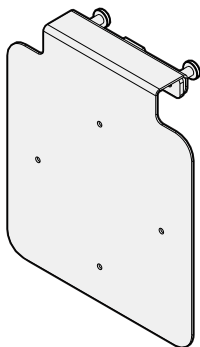

Hand Sanitizer Dispenser
and Drip Tray
HSD3
2x

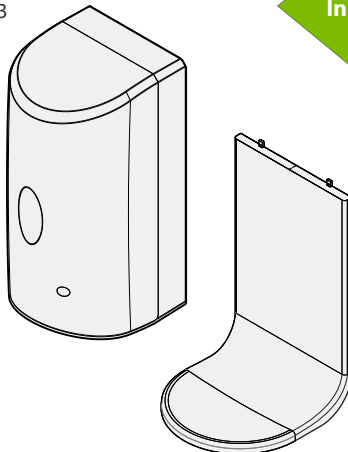

In Box 1

Hardware
Actual Size

(A) 1/4" -20 x 1" Hex Screw
(430205)
2x



(B) 6-32 x 3/8" Pan Head Screw
(4301352)
6x



(C) 6-32 Hex Nut
(430164)
4x



(D) 11/64" Flat Washer
(4301902)
4x



(E) 3/8" Flat Washer
(4301913)
2x



(F) #6-32 Keps Nut
(430154)
2x



You will need to follow the CS700 assembly instructions (located in the CS700-0 box) to complete the CS700-SAN setup.


1

Actual Size:

(A) 2x




You will need: (Not to Scale)

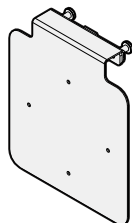

Dispenser Mounting Bracket
2x


Install Hex Screw into Mounting Bracket
Repeat for both Dispenser Mounting Brackets

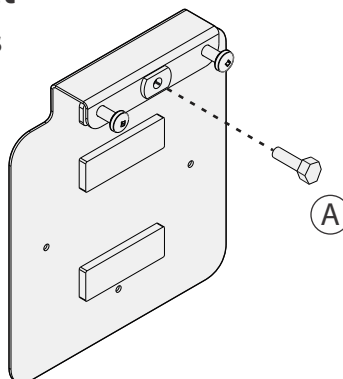


NOTE:
Only install 2 full turns

2


You will need: (Not to Scale)



Drip Tray
2x





Hand Sanitizer Dispenser
2x

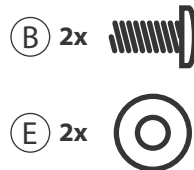


Install Drip Tray onto Dispenser

2x

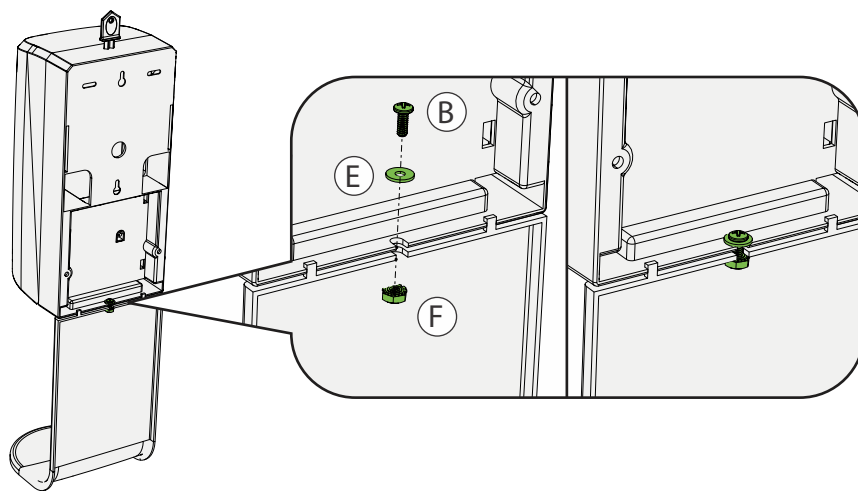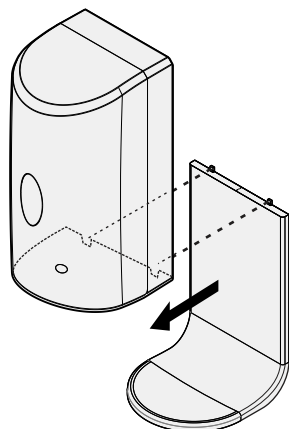



3

Actual Size:

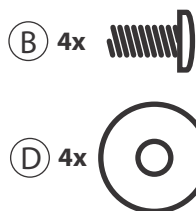

You will need: (Not to Scale)

Dispenser Mounting
Bracket
2x




Hand Sanitizer Dispenser
and Drip Tray
2x

Install Dispenser onto Mounting Bracket (2x)


Select top or side mounting option (look at step 4 for mounting options)

OPTION 1: Mounting on top of frame

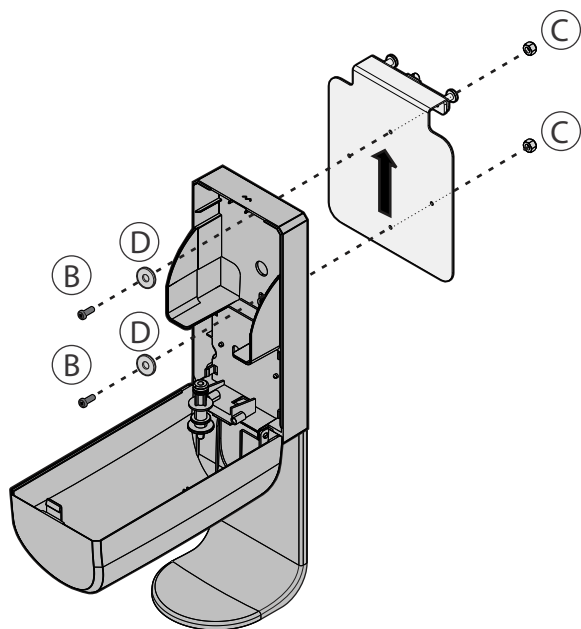


OR

OPTION 2: Mounting on side of frame

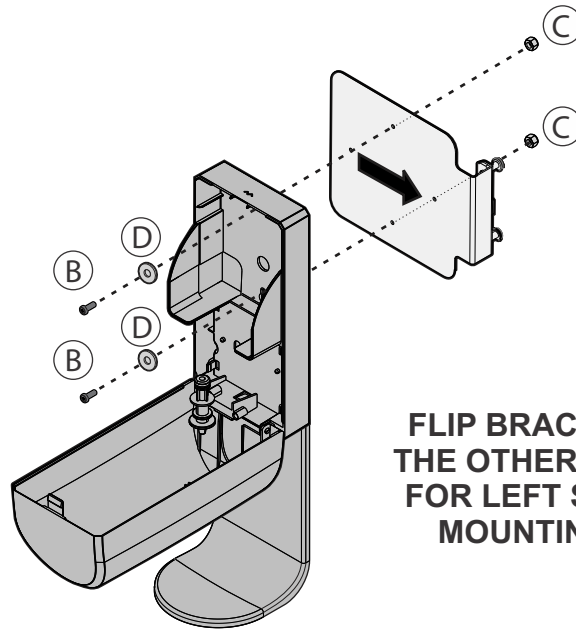


FLIP BRACKET
THE OTHER WAY
FOR LEFT SIDE
MOUNTING




Dispenser on Mounting Bracket
2x

Install Dispensers onto the frame

Choose the top or side depending on the option you chose in step 2.

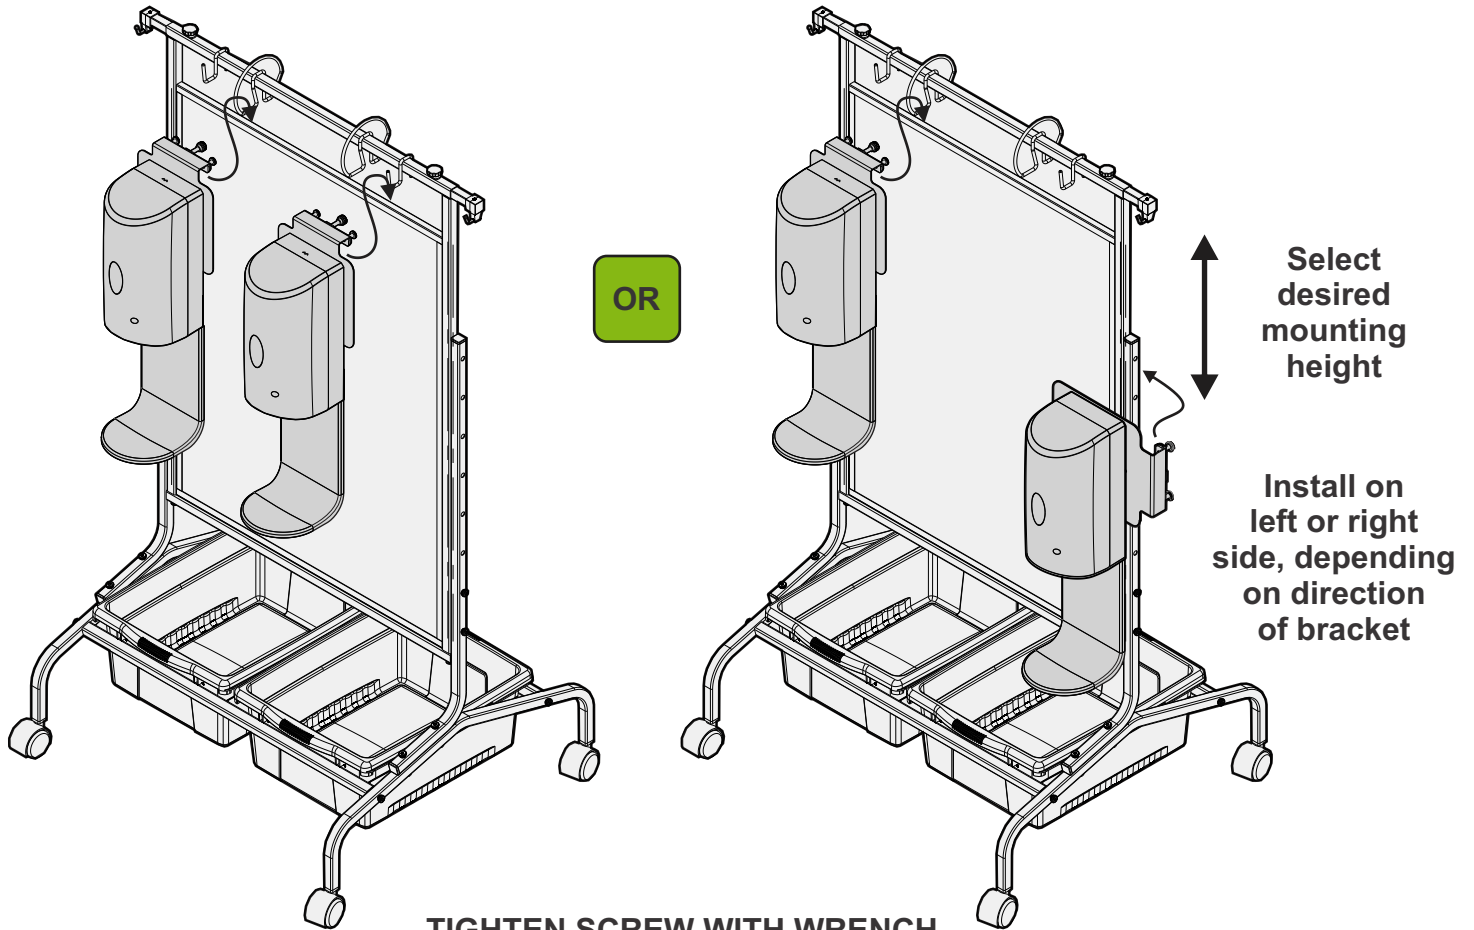

TIGHTEN SCREW WITH WRENCH

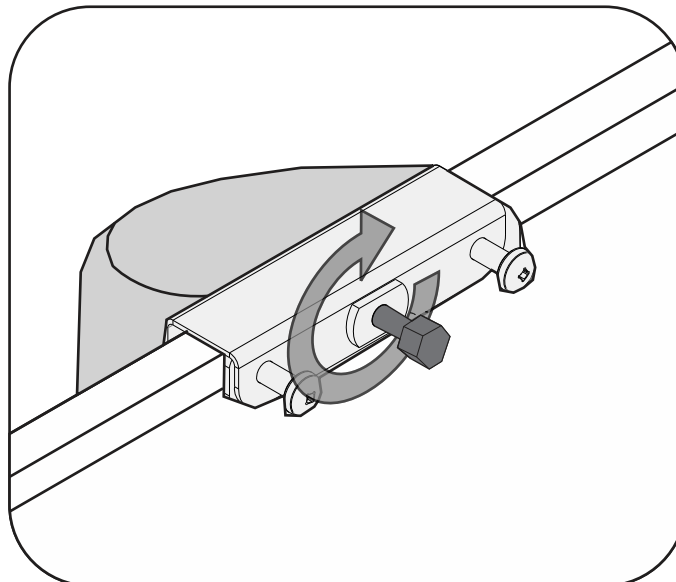

**Refer to Dispenser
instruction manual
for how to fill
your dispenser.**