

VRT101

VR Storage Tub – holds 10 all-in-one headsets



Assembly Guide VRT101_2019_A

Check out our other products online at
www.copernicused.com

For assistance, please contact us:

1-800-267-8494


Email info@copernicused.com

Have your packing slip ready for reference

WARNING



- This product is meant to be assembled by an adult.
- In its unassembled state, small parts present a hazard.
- To be used under direct supervision of an adult.

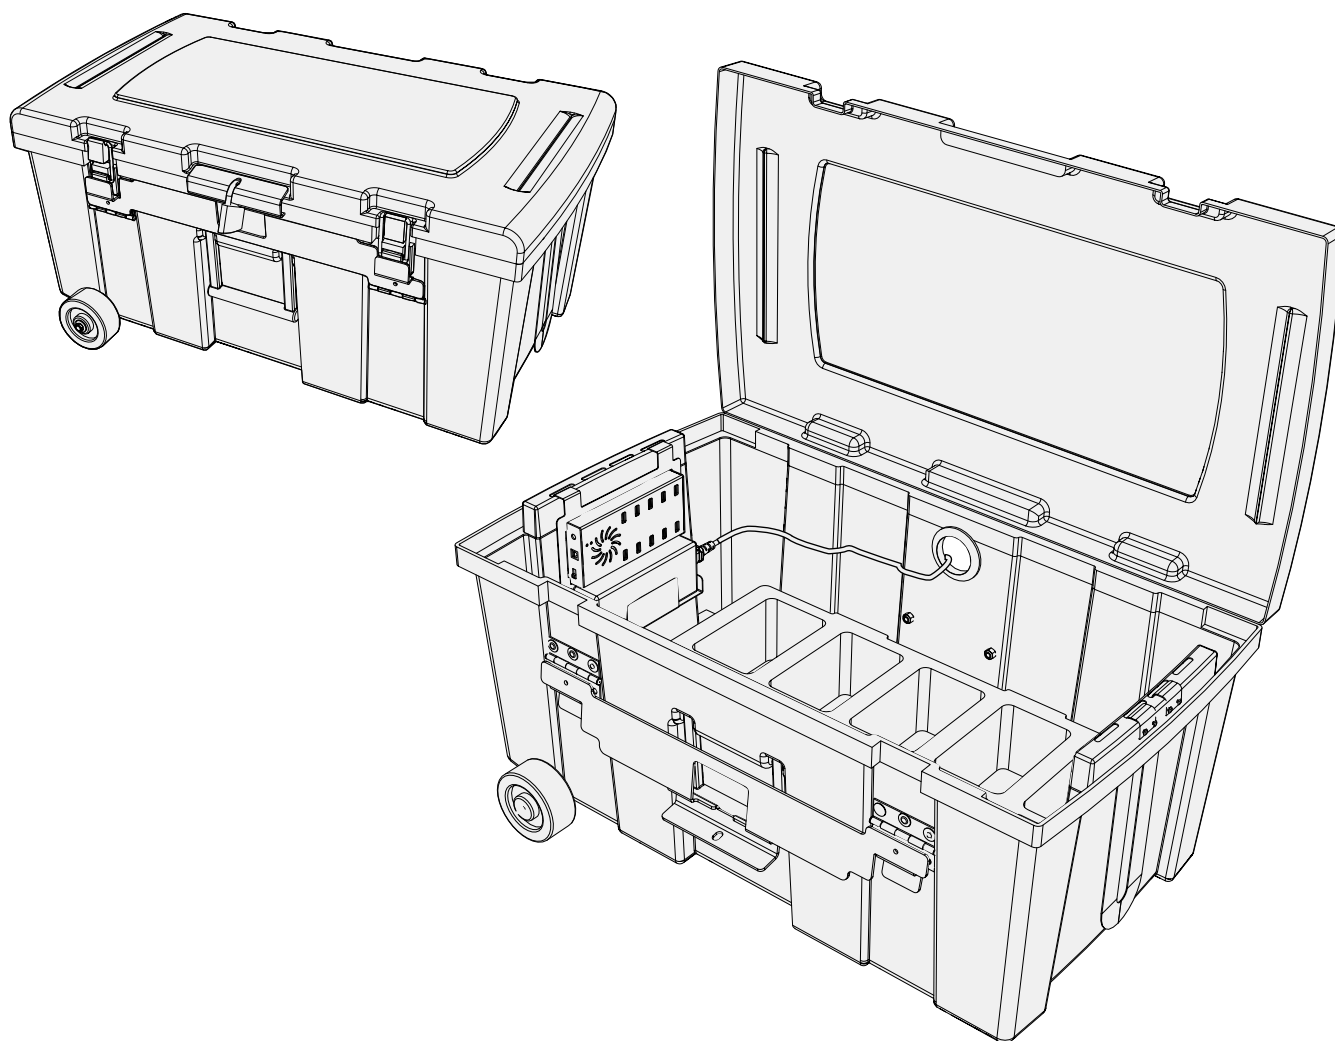

Please Recycle



Assembly Guide VRT101_2019_A

Check out our other products online at
www.copernicused.com

For assistance, please contact us:

1-800-267-8494

Email info@copernicused.com

Have your packing slip ready for reference

Dear Educator,

Thank you for purchasing the VR Storage Tub. We hope it meets all your expectations and you and your students enjoy using it at your school.

If you have any questions, concerns or ideas on how we can improve please let us know by contacting our Customer Solutions Ninjas at 1-800-267-8494 or info@copernicused.com.

Happy teaching,

Kaylyn Belcourt-McCabe
President

We do not inherit the
earth from our ancestors,
we borrow it from our
children.

Change is the end result
of all true learning.

LEO BUSCAGLIA

NORTH AMERICAN

PROVERB

What you leave behind is
not what is engraved in
stone monuments, but
what is woven into the
lives of others.

PERICLES

Education is the most
powerful weapon which
you can use to change the
world.

NELSON MANDELA

**1
Year**
Electrical
Component
Warranty

**5
Year**
Tub
Warranty

Validate Your Warranty

To validate your warranty, submit the ON-LINE form at www.copernicused.com
Enter a draw to win a Copernicus Product for your classroom at the same time!



Warning! Hazard Risks!

Please read the warnings below for important safety information regarding your product. Failure to read these warnings or to follow the instructions below could result in personal injury or damage to your product that could void your warranty.



Small
Parts

In its unassembled state, this product contains parts that can be hazardous to small children. This product should be assembled by an adult.




Adult
Supervision

This product is to be used under the supervision of an adult.




Indoor Use
Only

This product is intended for indoor use only. To reduce the risk of fire or electric shock, do not expose this product to rain or moisture. The internal components are not sealed from the environment.

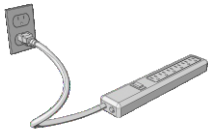

Power Strip
Specifications

Read your power strip electrical specifications. Only plug in devices that are approved for use with this power strip. Connect the supplied power strip directly to a wall outlet. **Do not connect to another power strip or use an extension cord.** Unplug when not in use. **Do not leave this product plugged in for more than 72 consecutive hours.** Turn off power strip before unplugging.

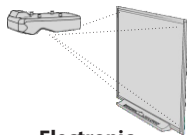

Electronic
Equipment

Read the electrical specifications of any electronic equipment you are using with your Copernicus products. Failure to read these specifications and follow their instructions could result in damage to your equipment or personal injury.



Cable Trip
Hazard

Ensure that any cables extending across the floor to your product are properly bundled and marked to avoid tripping or falling which may lead to personal injury.



Electrical Shock

Do not install or use the electrical components of this unit during a lightning storm.



Climb Hazard

Do not climb on, hang from or suspend objects from any components of your product unless otherwise specified.

Before beginning, you should have:

Additional tools required:



Adjustable wrench
2x

OR


11mm or 7/16" wrench
2x




14mm or 9/16" wrench
2x

Contents - Box 1


Tub
1x

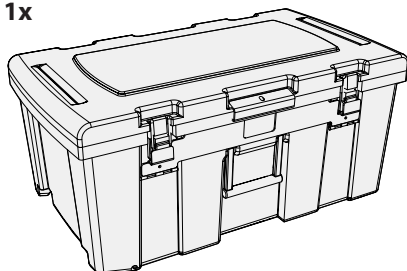


Wheel
(410048)
2x

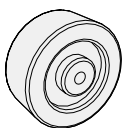


Headset Insert
(23245)
1x

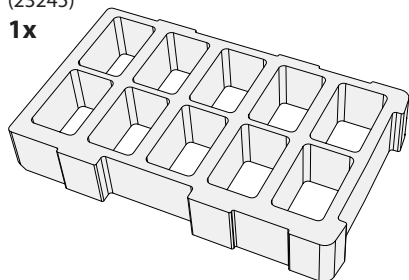

Headset Insert Bottom
(23246)
10x

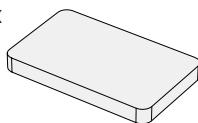


Hook & Loop
Straps
(43321)
10x



In Box 1

Hardware Actual Size

A 3/8" Flat Washer
(430197)
2x

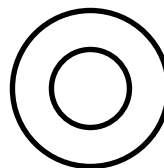

B 3/8" Lock Nut
(430122)
2x




C 1/4-20 Lock Nut
(430101)
2x




D 1/4-20 x 1/2" Hex Head Screw
(4302041)
2x




Axle
(31083)
1x



10 Port USB Hub
(255144)
1x

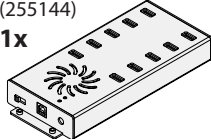

Power Adapter
(255146)
1x

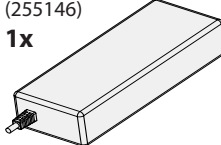


Power Cord
1x




North American
power cord shown.


Cable Hook
(34091)
1x




Padlock
(430440)
1x




Key
3x

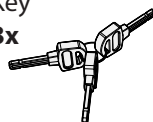

Mounting Bracket
1x

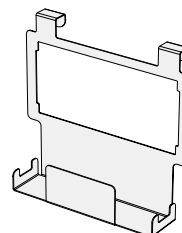

USB A - USB B Data Transfer Cable
1x

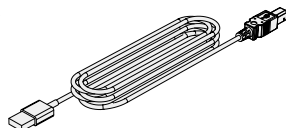

Tips for Assembly

Watch for These Helpful Symbols

This symbol denotes a 2-Person Task. For safety, please ensure that there are the suggested number of people working on steps displaying this symbol.



Watch for this symbol throughout the Assembly Guide. Wherever you see it, pay close attention. The symbol denotes a step needing extra attention to ensure it is done correctly.



The star symbol highlights an advisory note.



Before You Begin

- Lay out and identify all of the included parts.
- The hardware has been packed in bulk.
- Read the assembly guide over once to familiarize yourself with them.



! Please note that in its unassembled state, this product contains parts that can be hazardous to small children. This product should be assembled by an adult.

As You Assemble the Unit

- Follow the steps in sequence.
- Before beginning each step, find the part(s) that you need for that step.
- Pay attention to the labels on the parts; they are there to help direct you at certain stages.
- The title of each step states what you will be doing. Review the text and the pictures as you build the unit.

Customer Service - FAQ's



For missing parts and other issues regarding this product:

Please call Copernicus Customer Service, where we will be happy to help.
1-800-267-8494. Monday - Friday 8:30am - 4:30 pm EST.

OR

Email our Tech Support Service at info@copernicused.com

Need Tech Support? Have a Question?



Email our Tech Support Service

Check out some of our other great products!




www.copernicused.com

1

Actual Size:

You will need: (Not to Scale)


Remove Foam Insert

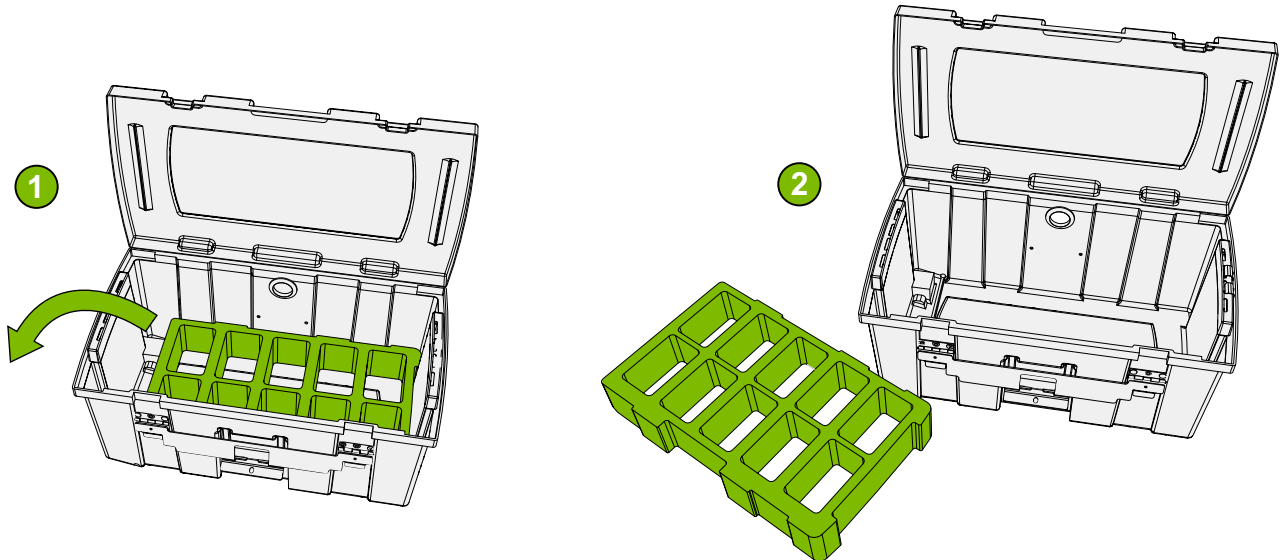

2

Actual Size:

(A) 3/8" Flat Washer
2x

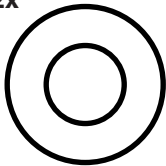


(B) 3/8" Lock Nut
2x



You will need: (Not to Scale)

Tub
1x

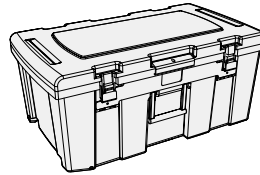


Adjustable wrench
2x



OR

Axle
1x




Wheel
2x




14mm or 9/16" wrench
2x

Install Wheels onto Tub

1 Insert axle through holes in tub

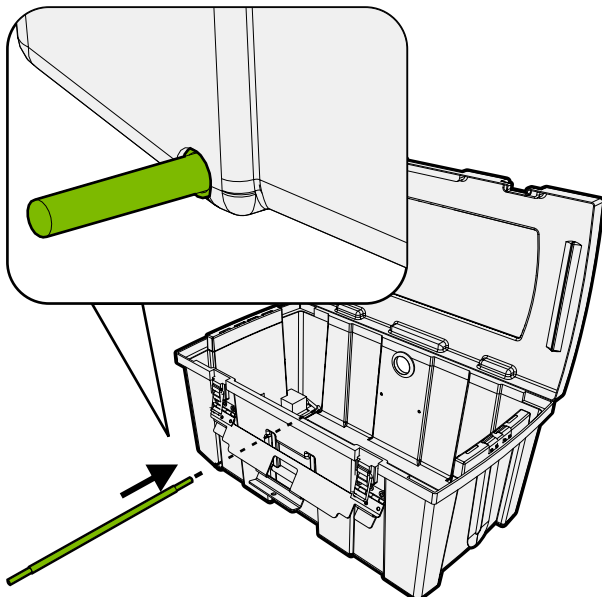

2 Fasten wheels onto axle

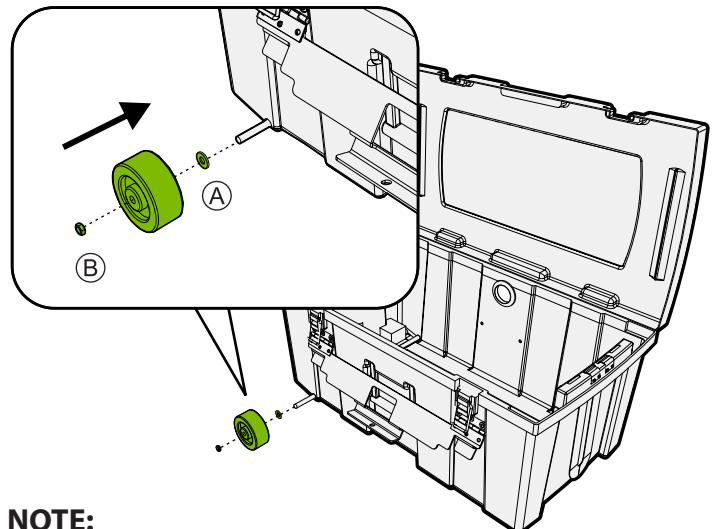

NOTE:
Fasten both wheels onto axle at the same time using two wrenches to prevent axle from spinning.

3

Actual Size:

(C) 1/4-20 x Lock Nut
2x




(D) 1/4-20 x 1/2" Hex Head Screw
2x



You will need: (Not to Scale)

Cable Hook
1x



Adjustable wrench
2x




OR

11mm or 7/16" wrench
2x


4

You will need: (Not to Scale)


Mounting
Bracket
x1




Power Adapter
x1



Install Cable Hook onto Tub

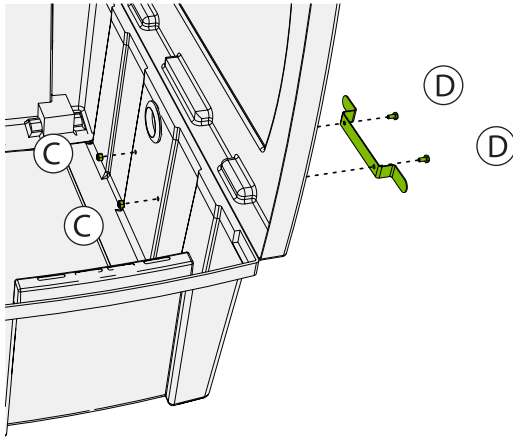


Insert Power Adapter into Mounting Bracket

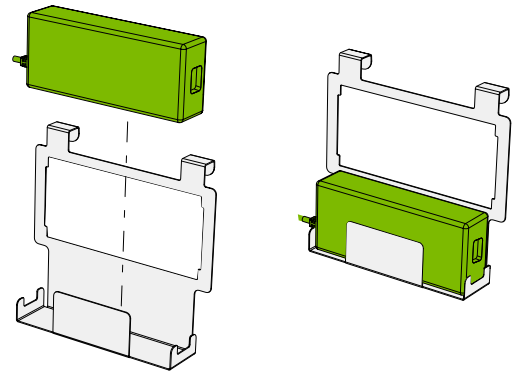


5

You will need: (Not to Scale)

10 Port USB Hub
x1

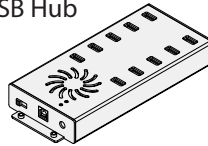

Insert USB Hub into Mounting Bracket and Attach to Tub Wall

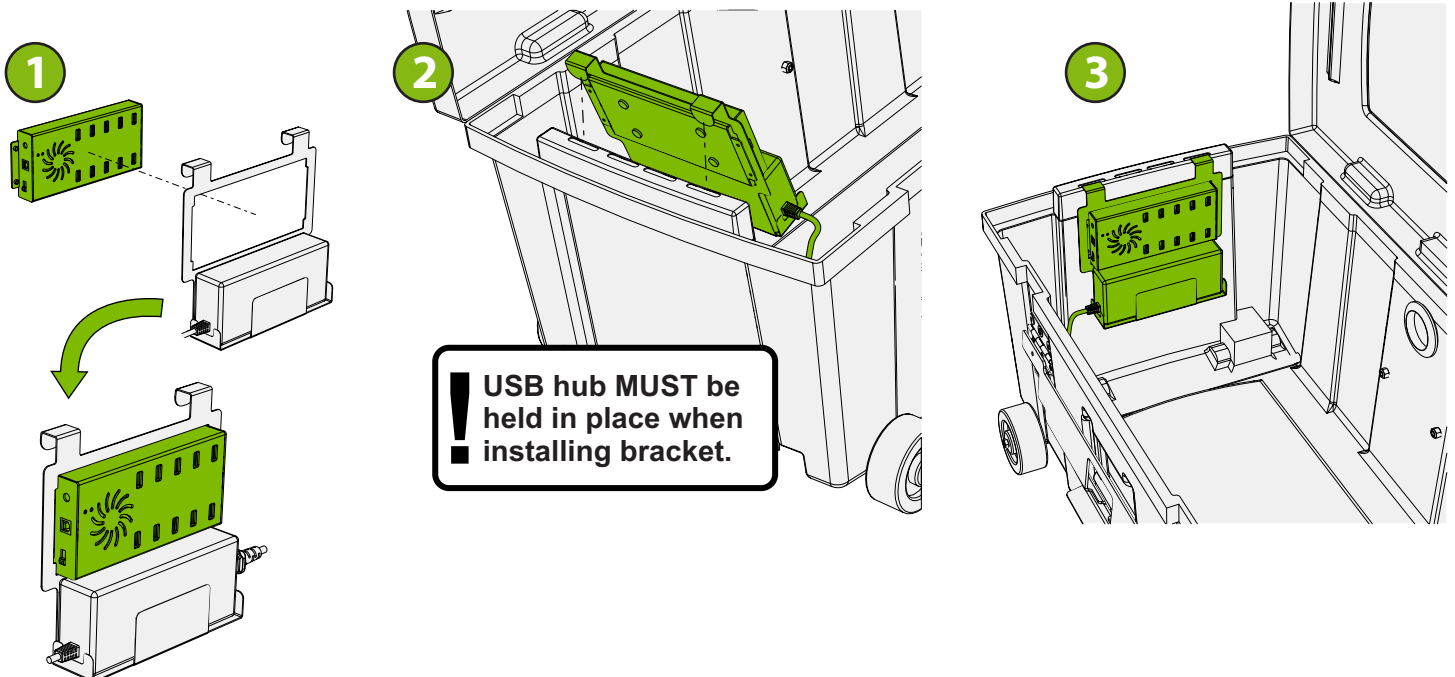




6

You will need: (Not to Scale)

Power Cord
1x




Connect USB and Power Adapter Cables and Wrap Around Cable Hooks

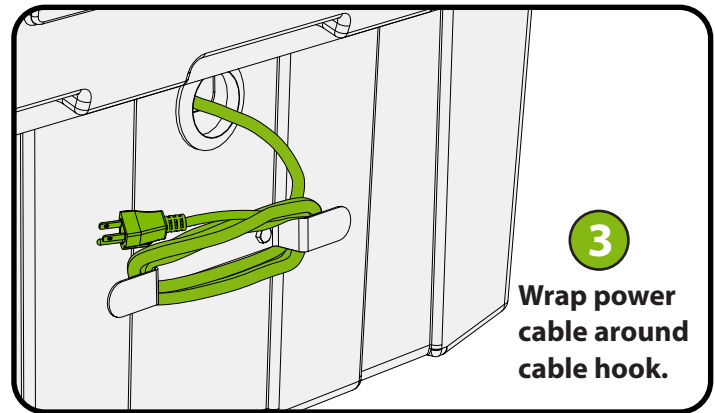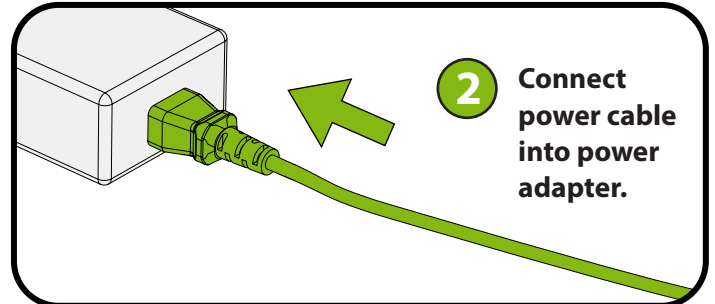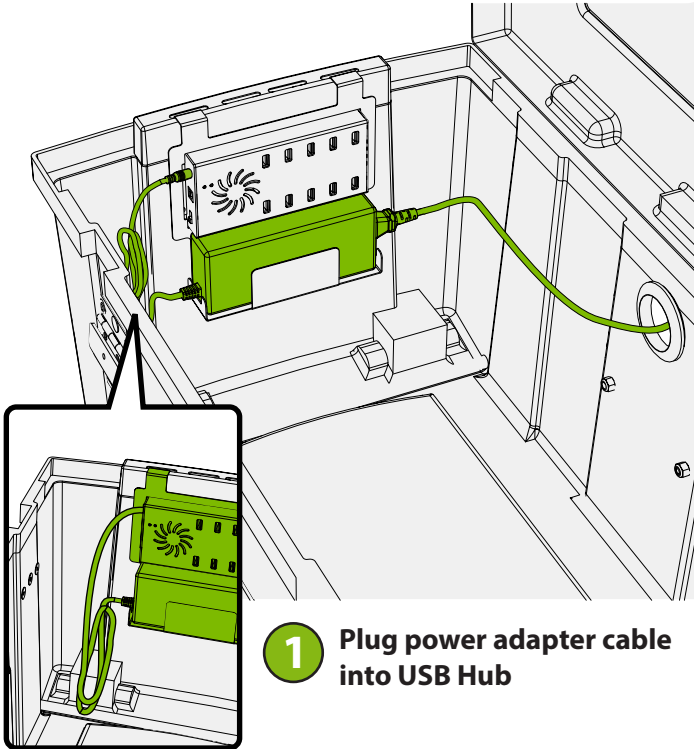


7

You will need: (Not to Scale)



Headset Insert
1x


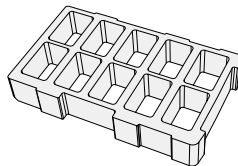


Headset Insert Bottom
10x

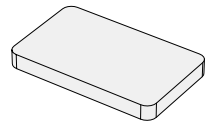


Insert Foam Insert and Bottom Pieces

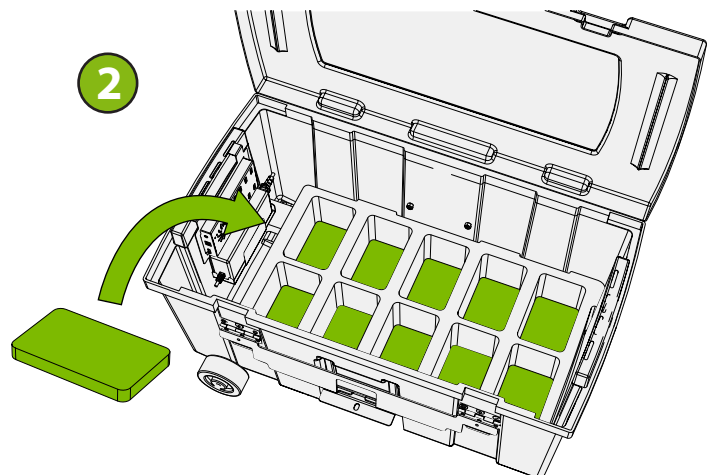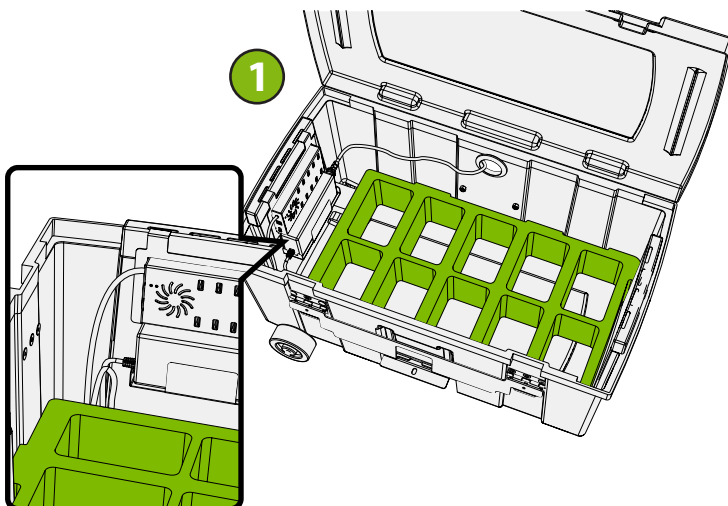

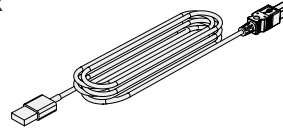



Setup cables

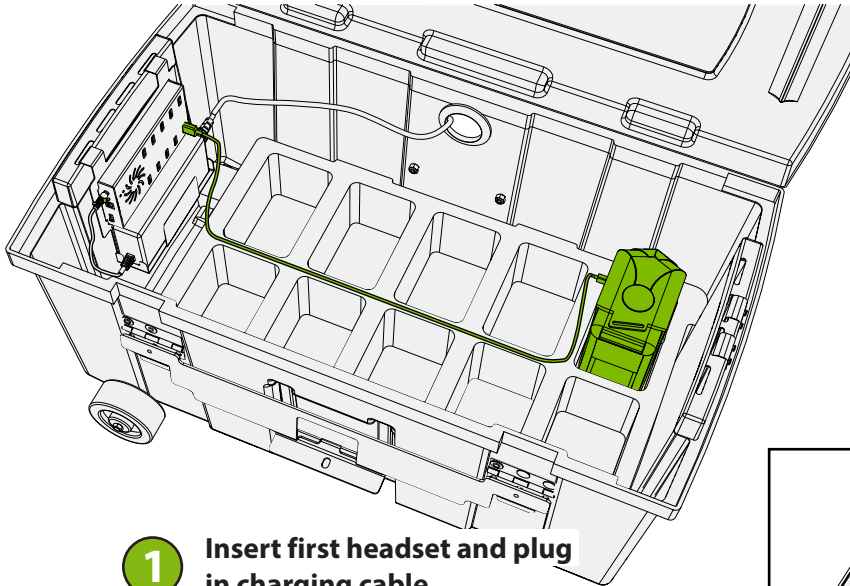


1 Insert first headset and plug in charging cable.

! Keep cables tidy by bundling extra cable length with the hook-loop straps provided.

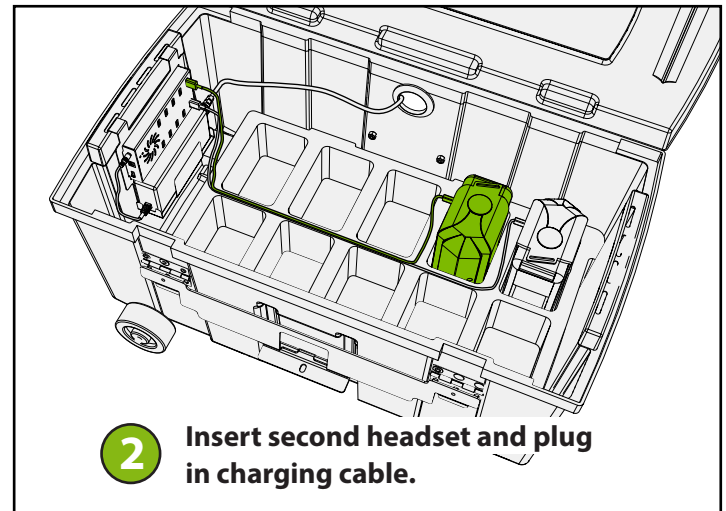
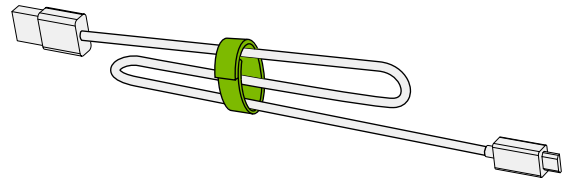


2 Insert second headset and plug in charging cable.


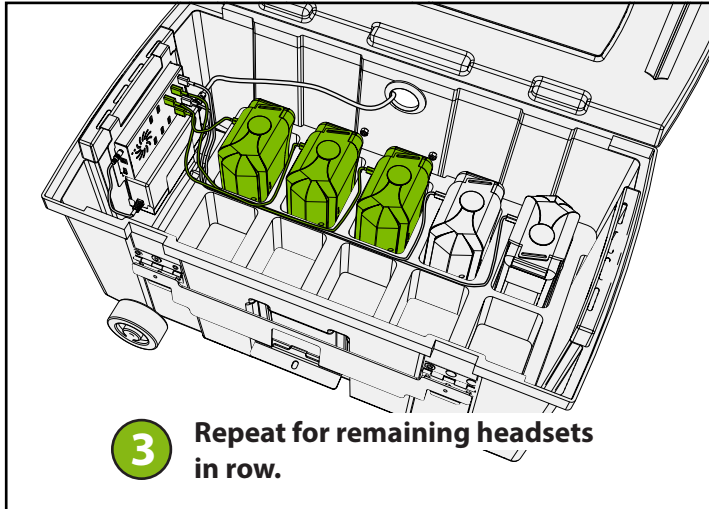


3 Repeat for remaining headsets in row.

! This data transfer cable is provided with the USB Hub. It is used to synchronize some devices.
Refer to your device's setup guide to find out if this cable is required by your device.

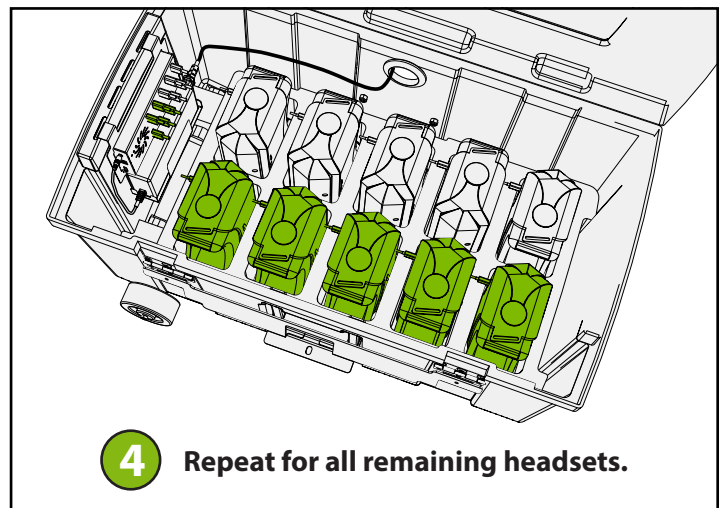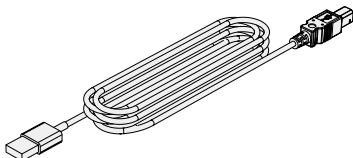

4 Repeat for all remaining headsets.

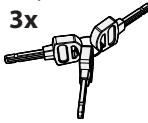Padlock
1xKey
3x

Lock Robotics Storage Tub

- 1 Close and latch Tub Lid
- 2 Swing Locking Plate up to cover latches
- 3 Insert Padlock through Locking Plate and Tub and lock with Keys

