

Tech Tub^{2°} Modular Cart with UV Tub



Assembly Guide FTT718-UV_718-USB-UV_726-UV _726-USB-UV_2020_A

Check out our other products online at **www.copernicused.com**

For assistance, please contact us:

1-800-267-8494

Email info@copernicused.com

Have your packing slip ready for reference

WARNING

- · This product is meant to be assembled by an adult.
- In its unassembled state, small parts present a hazard.
- To be used under direct supervision of an adult.

18 Device Cart

(FTT718-UV or FTT718-USB-UV)



26 Device Cart

(FTT726-UV or FTT726-USB-UV)



Tech Tub^{2°} Modular Cart with UV Tub



Assembly Guide FTT718-UV_718-USB-UV_726-UV 726-USB-UV 2020 A

Check out our other products online at **www.copernicused.com**

For assistance, please contact us:

1-800-267-8494

Email info@copernicused.com

Have your packing slip ready for reference

NELSON MANDELA

Dear Educator,

Thank you for purchasing the Tech Tub2 Modular Cart with UV Tub. We hope it meets all your expectations and you and your students enjoy using it at your school.

If you have any questions, concerns or ideas on how we can improve please let us know by contacting our Customer Solutions Ninjas at 1-800-267-8494 or info@copernicused.com.

Happy teaching,

Kaylyn Belcourt

Kaylyn Belcourt President

We do not inherit the	Change is the end result	What you leave behind is	Education is the most
earth from our ancestors,	of all true learning.	not what is engraved in	powerful weapon which
we borrow it from our	LEO BUSCAGLIA	stone monuments, but	you can use to change the
children.		what is woven into the	world.

NORTH AMERICAN

PERICLES

PROVERB



Register your Product

Registering your warranty ensures we have all the information we need to make any future warranty claims quick and easy. Please visit www.copernicused.com/warranty and complete the form within 10 business days from product assembly. By registering your product, you will be entered into a draw to win Copernicus product.

lives of others.



Make a Warranty Claim

We offer a Lifetime Warranty on almost everything we make. Please call 1-800-267-8494 or email info@copernicused.com to start your warranty claim. Proof of purchase will be required upon warranty claim (i.e. copy of invoice).





Warning! Hazard Risks!

Please read the warnings below for important safety information regarding your product. Failure to read these warnings or to follow the instructions below could result in personal injury or damage to your product that could void your warranty.



Small Parts

In its unassembled state, this product contains parts that can be hazardous to small children. This product should be assembled by an adult.



Adult Supervision

This product is to be used under the supervision of an adult.




Indoor Use Only

This product is intended for indoor use only. To reduce the risk of fire or electric shock, do not expose this product to rain or moisture. The internal components are not sealed from the environment.



Power Strip Specifications

Read your power strip electrical specifications. Only plug in devices that are approved for use with this power strip. Connect the supplied power strip directly to a wall outlet. **Do not connect to another power strip or use an extension cord.** Unplug when not in use. **Do not leave this product plugged in for more than 72 consecutive hours.** Turn off power strip before unplugging.



Read the electrical specifications of any electronic equipment you are using with your Copernicus products. Failure to read these specifications and follow their instructions could result in damage to your equipment or personal injury.



Cable Trip

Ensure that any cables extending across the floor to your product are properly bundled and marked to avoid tripping or falling which may lead to personal injury.




Do not install or use the electrical components of this unit during a lightning storm.



Do not climb on, hang from or suspend objects from any components of your product unless otherwise specified.


Tech Tub^{2°} Modular Cart with UV Tub


Before beginning, you should have:

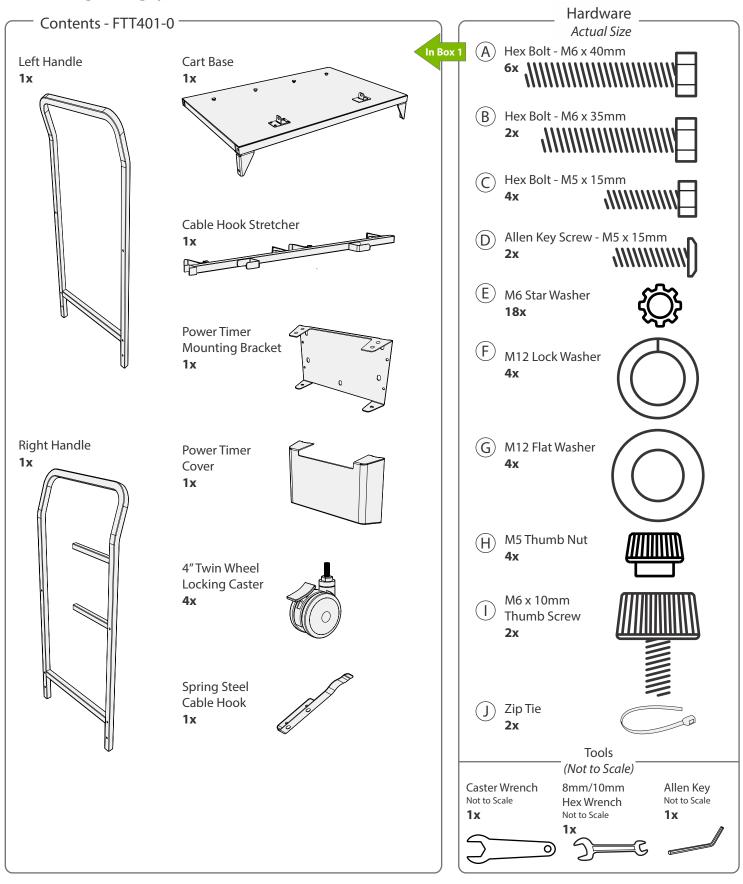


FTT718-UV


Tech Tub2 Modular Cart with UV Tub - Charges 18 Devices

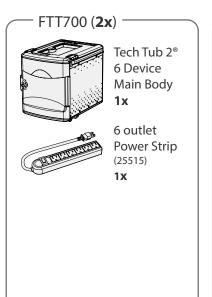


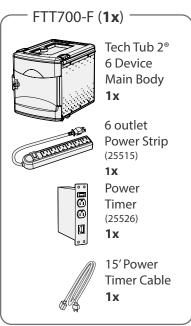


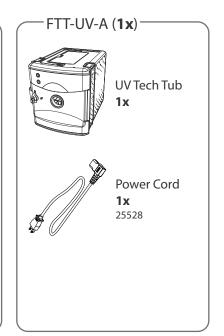


FTT718-USB-UV Tech Tub^{2°} Modular Cart with UV Tub - USB Charges 18 Devices

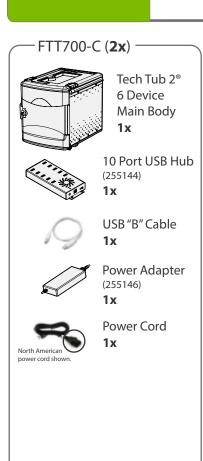

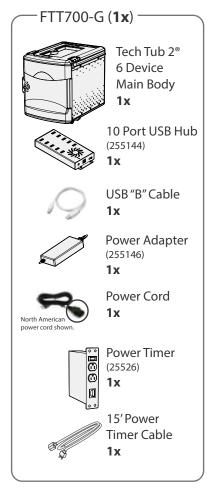


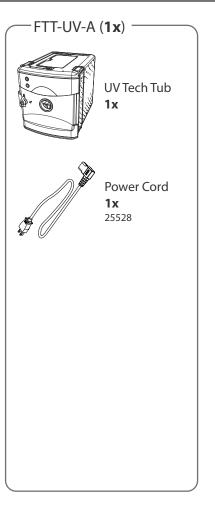

Tech Tub2 Modular Cart with UV Tub - Charges 26 Devices

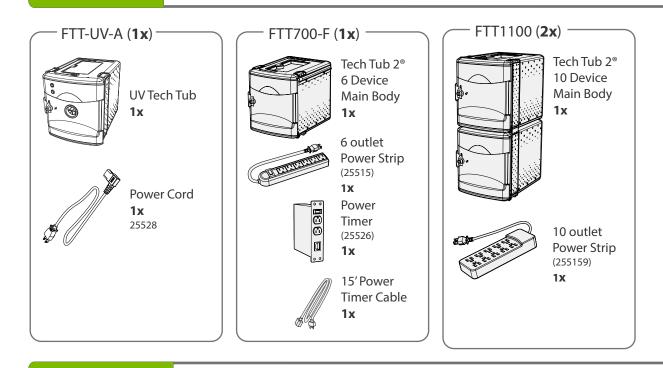

FTT726-USB-UV Tech Tub^{2*} Modular Cart with UV Tub - USB Charges 26 Devices

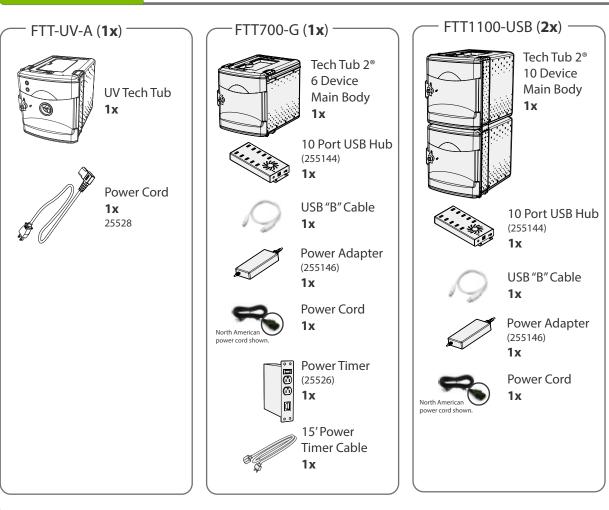

Tips for Assembly

Watch for These Helpful Symbols

- This symbol denotes a 2 Person Task. For safety, please ensure that there are the suggested number of people working on steps displaying this symbol.
- 2-Person Task
- Watch for this symbol throughout the Assembly Guide. Wherever you see it, pay close attention. The symbol denotes a step needing extra attention to ensure it is done correctly.



• The star symbol highlights an advisory note.

Before You Begin

- Lay out and identify all of the included parts.
- The hardware has been packed according to **step**.
- Read the assembly guide over once to familiarize yourself with them.



Please note that in its unassembled state, this product contains parts that can be hazardous to small children. This product should be assembled by an adult.

Please note, star washers are critical components for electrical safety. Star washers must be included and fasteners fully tightened to prevent the risk of electric shock.



As You Assemble the Unit

- Follow the steps in sequence.
- Before beginning each step, find the part(s) that you need for that step.
- Pay attention to the labels on the parts; they are there to help direct you at certain stages.
- The title of each step states what you will be doing. Review the text and the pictures as you build the unit.

Customer Service - FAQ's



For missing parts and other issues regarding this product:

Please call Copernicus Customer Service, where we will be happy to help. 1-800-267-8494. Monday - Friday 8:30am - 4:30 pm EST.

OR

Email our Tech Support Service at info@copernicused.com

Check out some of our other great products!




www.copernicused.com


Need Tech Support?
Have a Question?




Email our Tech Support Service

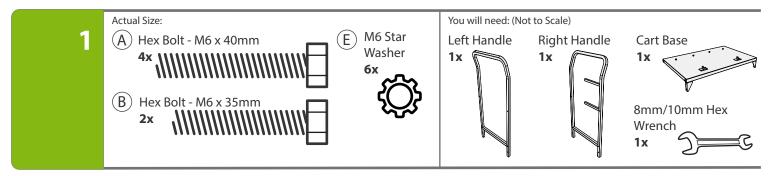

Attach left handle and right handle to cart base

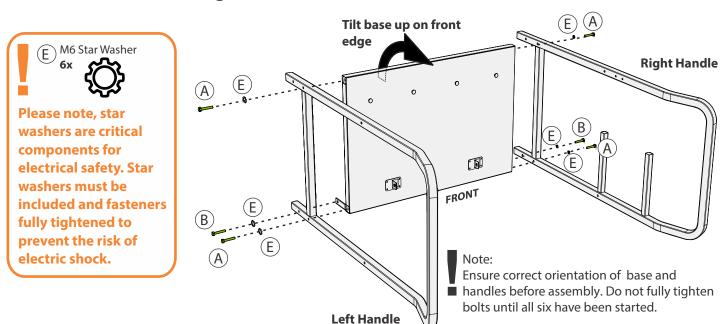


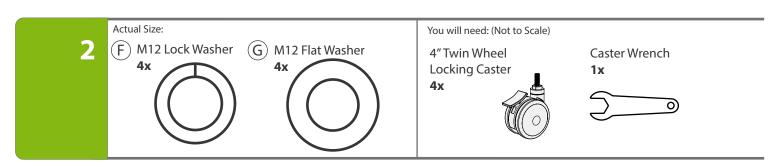


Attach Casters to cart




Lock the casters before installation so you can quickly thread them into the ends of the tube by hand. Use the caster wrench to finish tightening them completely.

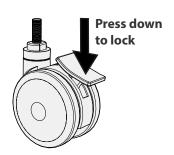

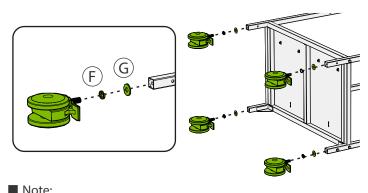


Return cart to upright position once casters are installed.

Check casters every 6 months and tighten as needed.

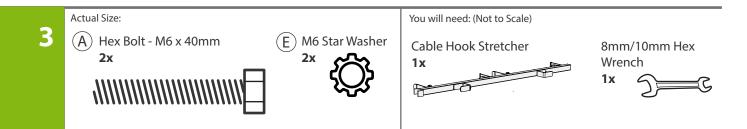



Fasten Cable Hook Stretcher to Handles

1 Position cable hook stretcher so it aligns with holes on handles

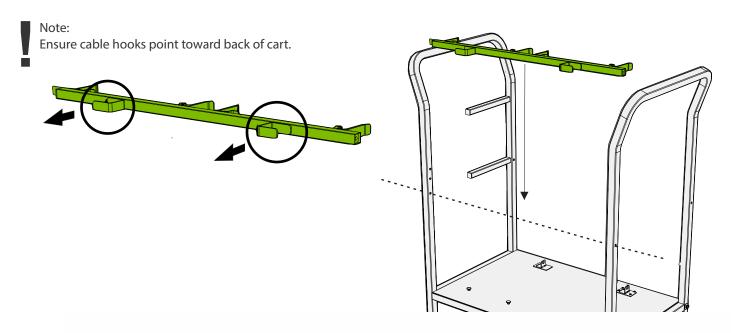



2 Fasten cable hook stretcher to handles

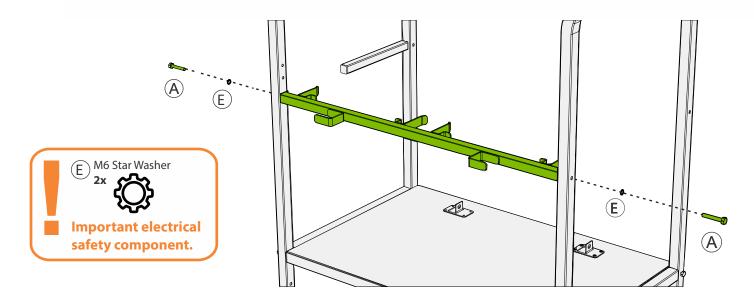

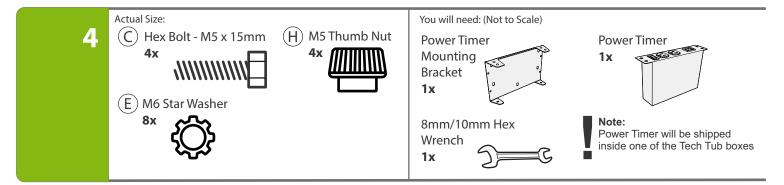


Install Power Timer

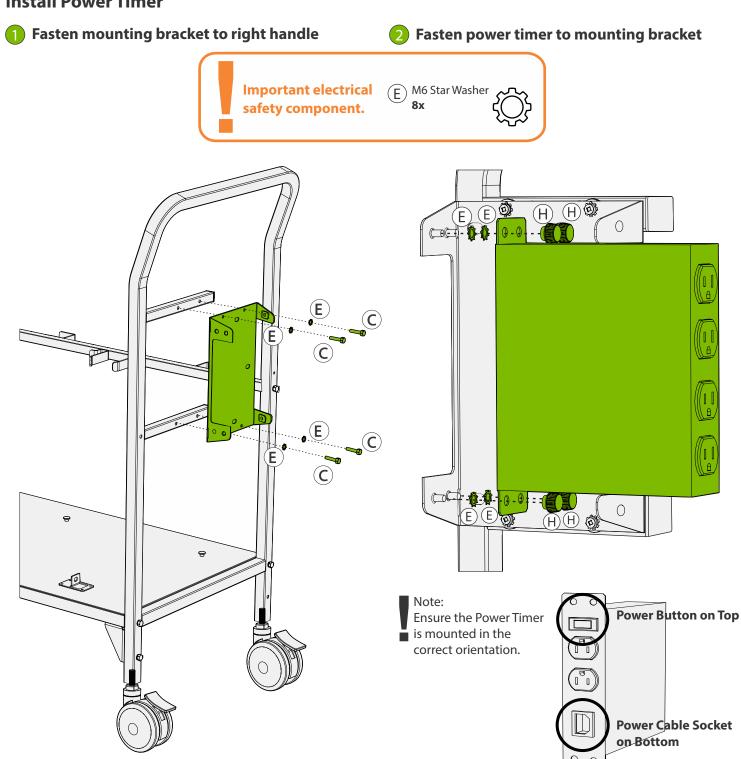

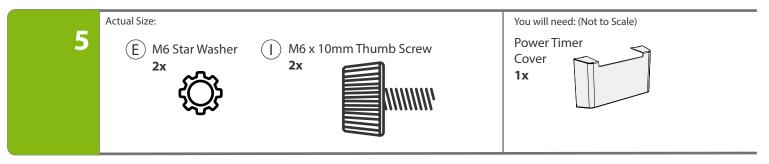


Install Power Timer


1 Hook power timer cover onto mounting bracket

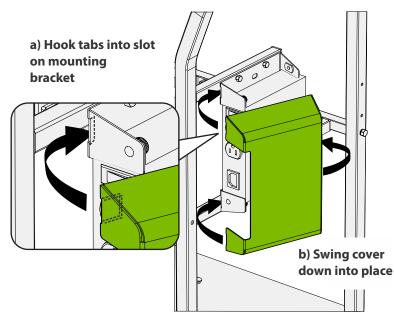

2 Fasten power timer cover to mounting bracket

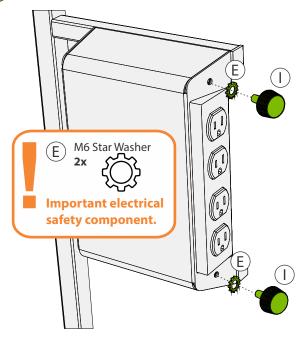




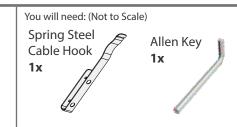

Install Spring Steel Cable Hook


Fasten to right handle at the back

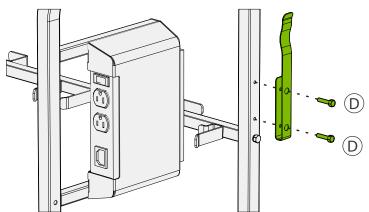

Before proceeding to the next step please check the entire assembly for loose parts; tighten all casters, bolts, screws and nuts.


Tighten all casters using supplied Caster Wrench.

Keep wrench with unit. Casters must be tightened every 6 months for proper maintenance.

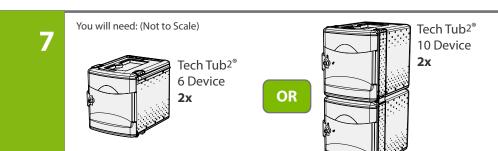

Install Tech Tubs onto cart

Note: Please follow the assembly instructions that accompanied your UV Tech Tub and Tech Tub 2® to get it ready for

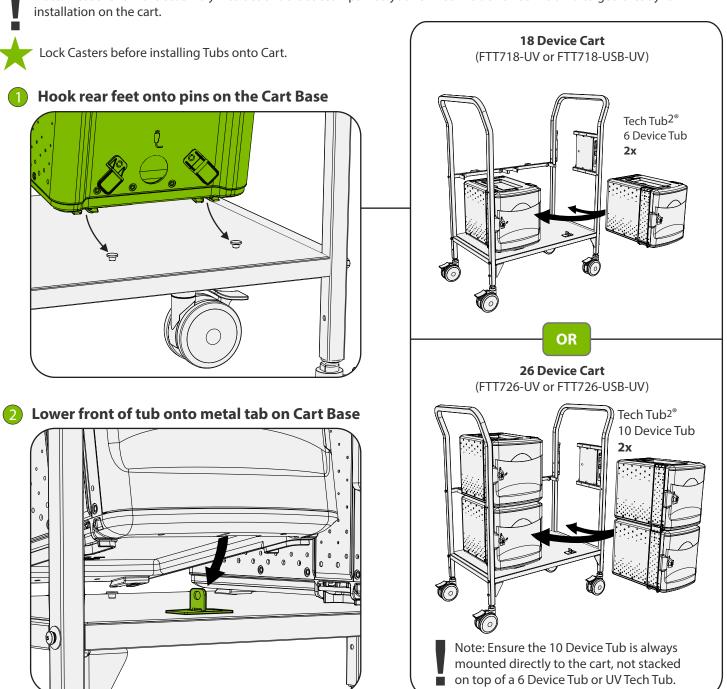


Repeat steps 1 and 2 for other side of cart

Continue on next page...

Install Tech Tubs onto cart

4 Open front door of tech tub and slide metal locking pin through metal tab

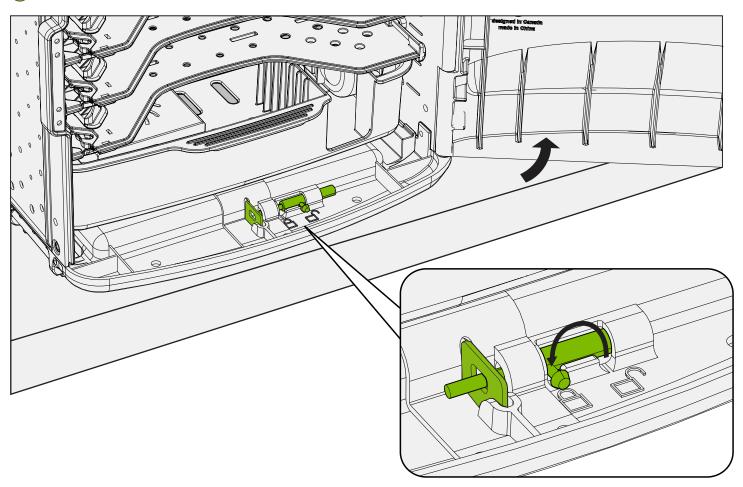

NOTE:


The locking process is the same for both left and right position on the cart.






Connect top layer of tubs to bottom layer


1 Flip up locking tab and open side flip locks on lower tub

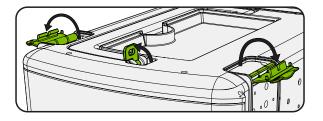


2 Insert back feet of UV Tech Tub into slot on top of lower tub and front feet into holes on top of lower tub

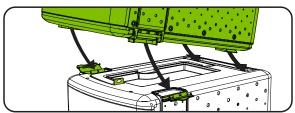

(3) Connect UV Tech Tub and lower tub using side flip locks

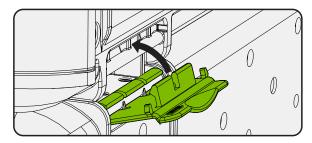

Open the front door of UV Tech Tub and slide locking pin through metal tab

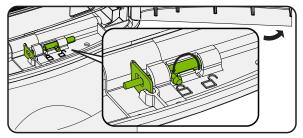


3 Close and lock front door of UV Tech Tub to secure.








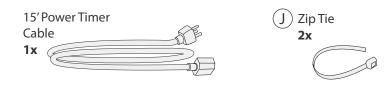


Attach Power Cable to Power Timer

1 Plug power cable into power timer

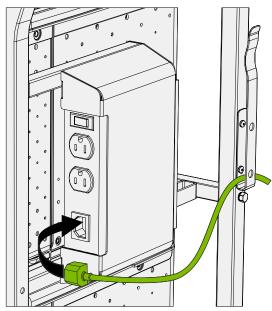

2 Zip tie power timer cable to frame

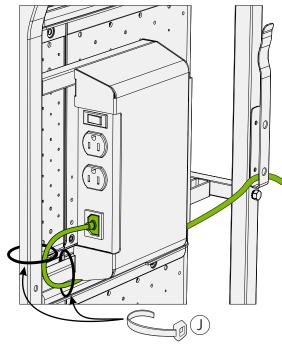


Note:

Leave some slack in cable when zip tying it to the cart to avoid excess strain on cable or power timer.

Trim the ends of the zip ties once they are fully tightened around the power cable.

3 Wrap power timer cable on cable hook stretcher before moving cart

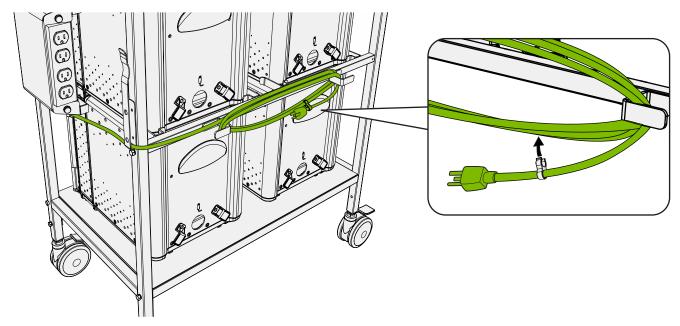

Note:


Use the attached clip to secure the power cable to itself before moving the cart.

Plug power cord from each tech tub into power timer Route power cables through spring steel cable hook and plug them into the power timer

Note:

To keep the power cables organized keep the excess length of cable wrapped on the back of the Tech Tubs.

Ensure that there is enough slack to prevent unnecessary strain on the power cables or power timer.

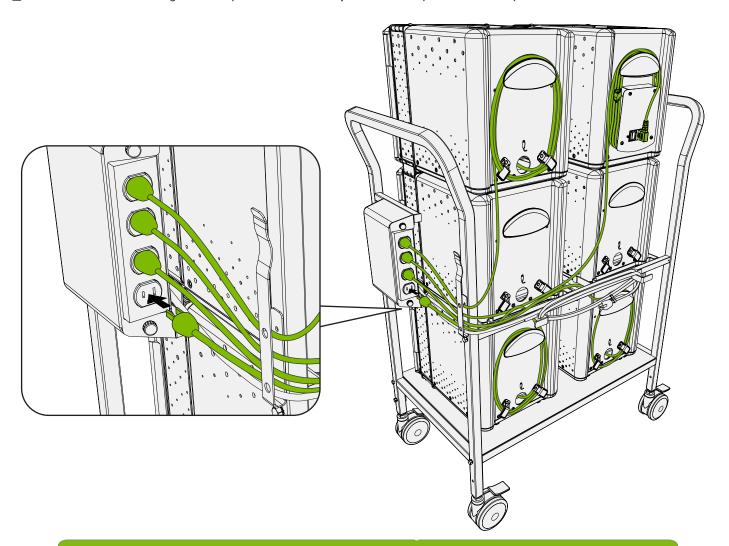

Do not stack more than three Tech Tub² or UV Tech Tubs.



Before operating the UV Tech Tub, remove it from the cart and place on a surface that is at least 30" above the floor.

Do not place the UV Tech Tub on the floor.

This is to prevent accidental collisions that can cause damage or injury from impact and tip over.